 


# OWNER'S MANUAL

COLOR TELEVISION

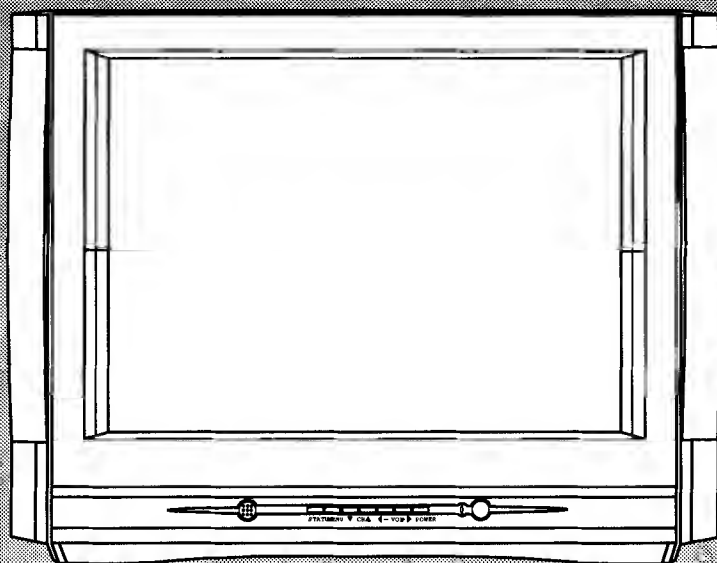

# PHILIPS MAGNAVOX

**IMPORTANT!**

Return Your Warranty Registration Card  
Within 10 Days. See Why Inside.

Return your Warranty Registration card today to ensure you receive all the benefits you're entitled to.

Once your PHILIPS MAGNAVOX purchase is registered, you're eligible to receive all the privileges of owning a PHILIPS MAGNAVOX product. So complete and return the Warranty Registration Card enclosed with your purchase at once. And take advantage of these important benefits.

### Warranty Verification

Registering your product within 10 days confirms your right to maximum protection under the terms and conditions of your PHILIPS MAGNAVOX warranty.

### Owner Confirmation

Your completed Warranty Registration Card serves as verification of ownership in the event of product theft or loss.

### Model Registration

Returning your Warranty Registration Card right away guarantees you'll receive all the information and special offers which you qualify for as the owner of your model.

Congratulations on your purchase, and welcome to the "family!"

**PHILIPS MAGNAVOX**



Dear PHILIPS MAGNAVOX product owner:

Thank you for your confidence in PHILIPS MAGNAVOX. You've selected one of the best-built, best-backed products available today. And we'll do everything in our power to keep you happy with your purchase for many years to come.

As a member of the PHILIPS MAGNAVOX "family," you're entitled to protection by one of the most comprehensive warranties and outstanding service networks in the industry.

What's more, your purchase guarantees you'll receive all the information and special offers for which you qualify, plus easy access to accessories from our convenient home shopping network.

And most importantly you can count on our uncompromising commitment to your total satisfaction.

All of this is our way of saying welcome—and thanks for investing in a PHILIPS MAGNAVOX product.

Sincerely,

Robert Minkhorst  
President and Chief Executive Officer

P.S. Remember, to get the most from your PHILIPS MAGNAVOX product, you must return your Warranty Registration Card within 10 days. So please mail it to us right now!

## Know these safety symbols



This "bolt of lightning" indicates uninsulated material within your unit may cause an electrical shock. For the safety of everyone in your household, please do not remove product covering.

The "exclamation point" calls attention to features for which you should read the enclosed literature closely to prevent operating and maintenance problems.

WARNING: TO PREVENT FIRE OR SHOCK HAZARD, DO NOT EXPOSE THIS EQUIPMENT TO RAIN OR MOISTURE.


CAUTION: To prevent electric shock, match wide blade of plug to wide slot, and fully insert.

ATTENTION: Pour éviter les chocs électriques, introduire la lame la plus large de la fiche dans la borne correspondante de la prise et pousser jusqu'au fond.

**PHILIPS MAGNAVOX** Visit our World Wide Web Site at <http://www.philipsmagnavox.com>

# SAFETY INSTRUCTIONS - Read before operating equipment

This product was designed and manufactured to meet strict quality and safety standards. There are, however, some installation and operation precautions which you should be particularly aware of.

 
1. **Read Instructions** - All the safety and operating instructions should be read before the appliance is operated.
2. **Retain Instructions** - The safety and operating instructions should be retained for future reference.
3. **Heed Warnings** - All warnings on the appliance and in the operating instructions should be adhered to.
4. **Follow Instructions** - All operating and use instructions should be followed.
5. **Water and Moisture** - The appliance should not be used near water - for example, near a bathtub, washbowl, kitchen sink, laundry tub, in a wet basement or near a swimming pool, etc.
6. **Carts and Stands** - The appliance should be used only with a cart or stand that is recommended by the manufacturer.
- 6A.  An appliance and cart combination should be moved with care. Quick stops, excessive force, and uneven surfaces may cause the appliance and cart combination to overturn.
7. **Wall or Ceiling Mounting** - The appliance should be mounted to a wall or ceiling only as recommended by the manufacturer.
8. **Ventilation** - The appliance should be situated so that its location or position does not interfere with its proper ventilation. For example, the appliance should not be situated on a bed, sofa, rug, or similar surface that may block the ventilation openings; or, placed in a built-in installation, such as a bookcase or cabinet that may impede the flow of air through the ventilation openings.
9. **Heat** - The appliance should be situated away from heat sources such as radiators, heat registers, stoves, or other appliances (including amplifiers) that produce heat.
10. **Power Sources** - The appliance should be connected to a power supply only of the type described in the operating instructions or as marked on the appliance.
11. **Power-Cord Protection** - Power supply cords should be routed so that they are not likely to be walked on or pinched by items placed upon or against them, paying particular attention to cords and plugs, convenience receptacles, and the point where they exit from the appliance.

12. **Cleaning** - The appliance should be cleaned only as recommended by the manufacturer.
13. **Power Lines** - An outdoor antenna should be located away from power lines.
14. **Outdoor Antenna Grounding** - If an outside antenna is connected to the receiver, be sure the antenna system is grounded so as to provide some protection against voltage surges and built up static charges.  
Section 810 of the National Electric Code, ANSI/NFPA No. 70-1984, provides information with respect to proper grounding of the mast and supporting structure grounding of the lead-in wire to an antenna discharge unit, size of grounding connectors, location of antenna-discharge unit, connection to grounding electrodes and requirements for the grounding electrode. See Fig. below.
15. **Non-use Periods** - The power cord of the appliance should be unplugged from the outlet when left unused for a long period of time.
16. **Object and Liquid Entry** - Care should be taken so that objects do not fall and liquids are not spilled into the enclosure through openings.
17. **Damage Requiring Service** - The appliance should be serviced by qualified service personnel when:
  - A. The power supply cord or the plug has been damaged; or
  - B. Objects have fallen, or liquid has been spilled into the appliance; or
  - C. The appliance has been exposed to rain; or
  - D. The appliance does not appear to operate normally or exhibits a marked change in performance; or
  - E. The appliance has been dropped, or the enclosure damaged.
18. **Servicing** - The user should not attempt to service the appliance beyond that described in the operating instructions. All other servicing should be referred to qualified service personnel.

**Note to the CATV system installer:** This reminder is provided to call the CATV system installer's attention to Article 820-40 of the NEC that provides guidelines for proper grounding and, in particular, specifies that the cable ground shall be connected to the grounding system of the building, as close to the point of cable entry as practical.

## EXAMPLE OF ANTENNA GROUNDING AS PER NATIONAL ELECTRICAL CODE (NEC)

### Example of Antenna Grounding as per NEC - National Electric Code

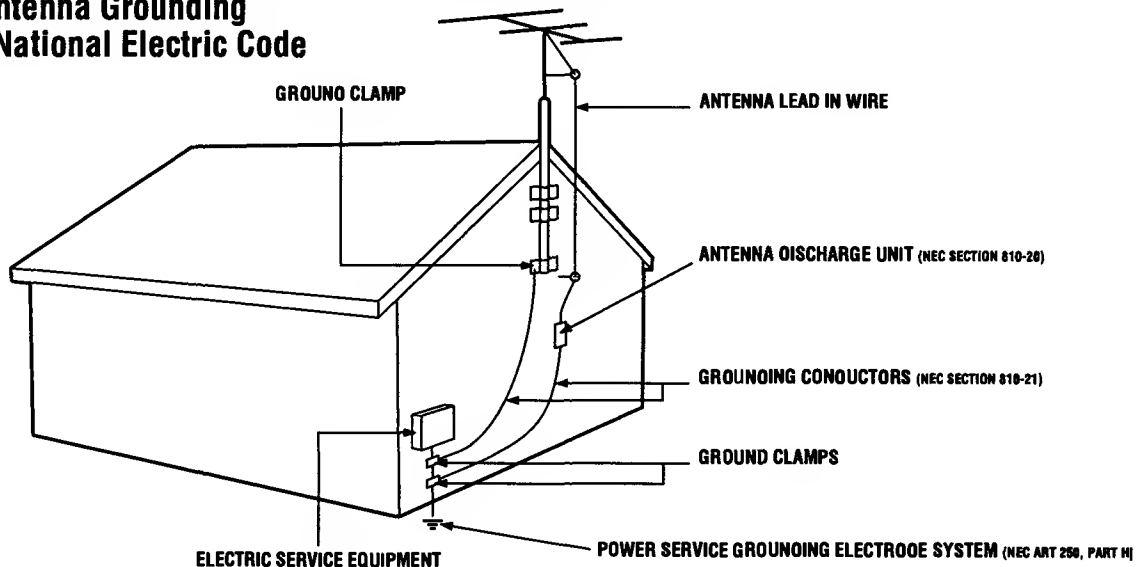

# TABLE OF CONTENTS



## **Getting Started**

Welcome/Product Registration .....	2
Safety/Precautions .....	3
Table of Contents .....	4
Features, Model Information .....	5



## **On-Screen Features**

### **PICTURE MENU**

- ✧ Adjusting Color, Brightness, Sharpness, Tint, and Picture Controls .....6
- ✧ Using the Magnavue Feature.....6

### **FEATURES MENU**

- ✧ Selecting a Picture Source .....7
- ✧ Setting the TV for Closed Captioning.....8
- ✧ Setting the TV for Cable or Antenna Signals.....9
- ✧ Adding Channels in Memory (Automatically) .10
- ✧ Adding Channels in Memory (Manually) .....11
- ✧ Setting the TV Clock.....12
- ✧ Turn-On Timer .....13
- ✧ Using the Sleep Timer Control .....14
- ✧ Adjusting the Channel Display Control .....15
- ✧ Using the Time/Channel Reminder Control.....16
- ✧ Using the Language Selection Control.....17

### **SOUND MENU**

- ✧ Adjusting Bass, Treble, and Balance Sound Controls.....18
- ✧ Setting the TV for Stereo and SAP Programs ..19
- ✧ Using the Incredible Stereo Control .....20
- ✧ Using the Volume Display Control .....21
- ✧ Using the TV Speaker On/Off Control with the Audio Output Jacks.....22
- ✧ Using Surround Sound External Speakers .....23
- ✧ Using the TV's Audio/Video Input Jacks ...24-25



## **Remote Control Operation**

Using the Remote Locator Feature .....	26-27
Setting the Smart Picture Control .....	28-29
Using Smart Sound Control .....	30
Using the Smart Surf Control .....	31
Setting the Remote to Work VCRs .....	32-33
Setting the Remote to Work Cable TV Converters .....	34-35
Setting the Remote to Work VCRs or Cable Converters - "Search Method" .....	36
Using the Remote's VCR buttons .....	37



## **Picture-In-Picture (PIP)**

How to Use PIP (Connections).....	38-39
How to Use PIP with the TV Remote .....	40
Selecting the Picture Source for PIP .....	41
Adjusting Picture-in-Picture Color and Tint.....	42
More PIP Connections (Cable Converter) .....	43



 
## **General Information**

TV Help Menu .....	43
Tips if Something Isn't Working .....	44
Glossary of TV Terms .....	45
Index .....	45
Factory Service Locations .....	46-47
Warranty .....	48

## **SET-UP AND QUICK USE GUIDE**

Use the simple Set-Up Guide (supplied with your TV information packet) for details on:

- Antenna Hook-ups
- First Time Set-Up (Automatic Settings)
- Basic TV and Remote Control Operation
- On-Screen Menu Use

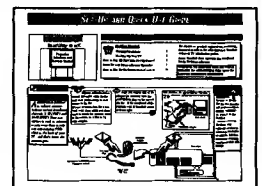



**First Time Set Up** - automatically sets the TV for local channels, the correct picture signal (antenna or cable), and assists in the setting of the Smart Clock feature.

**Infrared Remote Control** - operates your TV set and a variety of wireless remote control VCRs and Cable TV Converters. A special "Locator" feature can also help you find the remote when it has been stuck out of sight or misplaced.

**Standard TV broadcast (VHF/UHF) or Cable TV (CATV) channel capability.**

**Closed Captioning** - allows the viewer to read TV program dialogue or voice conversations as on-screen text.

**Automatic Programming of channels** - for quick and easy selection of favorite stations available in your area.

**Picture-In-Picture (PIP)** - can show a TV program and the direct video output from an accessory (VCR, etc.) onto the TV screen at the same time.

**Stereo-TV** - with a built-in audio amplifier and a twin speaker system, reception of TV programs in both broadcast stereo sound or (SAP) bilingual broadcast are available.

**Twin Antenna (A/B) Inputs** - for easy displaying of two separate signal sources on the TV. An A/B button on the remote control switches the TV's Main screen between the two Antenna (A & B) Input options.

**Audio/Video Jacks** - for direct connections with VCRs (and other accessories) for quality TV picture and sound playback.

**Surround Sound** - this TV set is equipped for connections with external audio equipment for more dynamic sound replay and audio effects.

**Sleep-Timer** - automatically turns the TV OFF at preset time intervals.

**Smart Button** - for the control of TV Sound and the Picture levels. Use the Smart Button on the remote to quickly adjust Smart Sound (to set TV Volume levels during program changes or commercial breaks); Smart Picture (for programmed video level adjustments on a variety of program sources); and Smart Surf (for quick one button channel selection of up to 10 of your favorite channels).

As you unpack your TV please note that the following items have been included with your set:

- Owner's Manual
  - Safety Tip Information
  - Factory Service Center Locations
- Warranty Registration Card
- Remote Control Transmitter
- Batteries for Remote Control Use

Please take a few minutes to complete your registration card. The serial number for the TV is on the back of the set.

Refer to the back of this manual for instructions on the cleaning and care of the TV.

# PICTURE MENU CONTROL ADJUSTMENTS

## COLOR, BRIGHTNESS, SHARPNESS, TINT, PICTURE

To adjust your TV color and picture controls, select a TV channel and follow the steps shown below:

### BEGIN

 
 
 
 
- 1 Select **BRIGHTNESS, PICTURE, COLOR, TINT, or SHARPNESS** picture control.

With the PICTURE MENU on screen, move the RED highlight with the MENU (M) buttons. Then press the MENU button.

- 2 Press the (+) or (-) buttons to adjust the selected control.

- 3 Press the **STATUS** button to clear the screen.

STOP

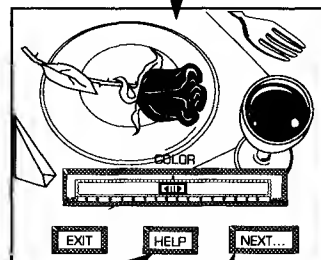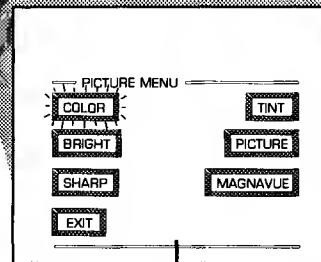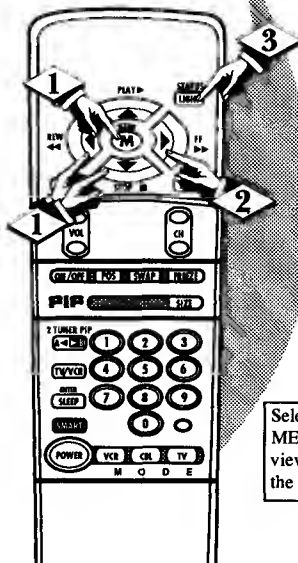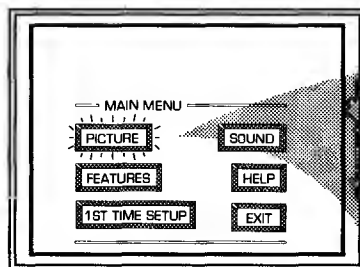

Select and then press MENU (M) button to view an explanation of the selected feature.

Select and then press MENU (M) button to view additional controls grouped under same feature heading. For Example: Tint, Brightness, Picture, etc.

## SMART HELP



Remember. When the bar scale is centered, control settings are at normal mid-range levels.

**BRIGHTNESS** Press (-) or (+) until dark parts of the picture show good detail.

**PICTURE** Press (-) or (+) until whitest parts of the picture are as bright as you prefer.

**COLOR** Press (-) or (+) to add or eliminate color.

**TINT** Press (-) or (+) to obtain natural skin tones. (Also see Flesh Correction on page 14 for more information).

**SHARPNESS** Press (-) or (+) to improve detail in the picture.

## MAGNAVUE

*Magnavue is a sharpness feature which smooths out background snow (or picture noise) without losing picture image detail or crispness.*

### BEGIN

 
 
 
 
- 1 Select the **MAGNAVUE** control.

With the PICTURE MENU on screen, move the RED highlight with the MENU (M) buttons. Then press the MENU button.

- 2 Press the MENU buttons to move the RED highlight. Press the MENU button to select (✓) either ON or OFF.

- 3 Press the **STATUS** button to clear the screen.

STOP

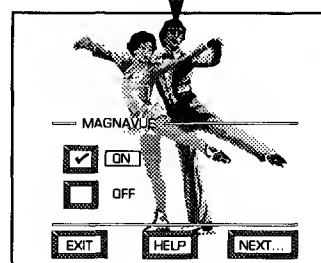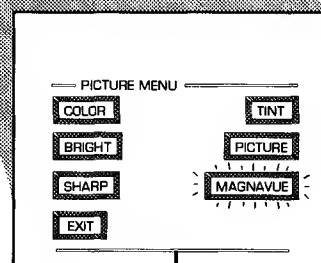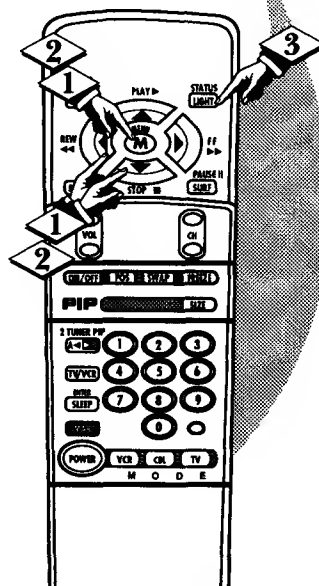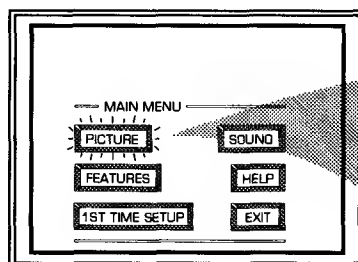

## PICTURE SOURCE

The picture for the TV can come through either the ANTENNA plug or the AUDIO/VIDEO INPUT jacks (on the rear of the TV). The Picture Source control simply tells the TV which one of these picture sources it is to show on the TV screen.

**BEGIN**

### 1 Select PICTURE SOURCE SELECT control.

With the FEATURES MENU on screen, move the RED highlight with the MENU (M) buttons. Then press the MENU button.

### 2 Press the MENU ▲▼ buttons to move the RED highlight. Press the MENU button to turn the desired PICTURE SOURCE control ON (✓).

 
 
 
 
**ANT A or B-** for a picture signal coming from either the ANT(enna) A or B Input plugs on the TV.

**AUX** - for a picture signal coming from the AUX Video Input jack on the rear of the TV.

**S-VIDEO** - for better picture detail and clarity. Also used for the playback of S-VHS VCR tapes, Video Discs, etc.

### 3 Press the STATUS button to clear the screen.

**STOP**

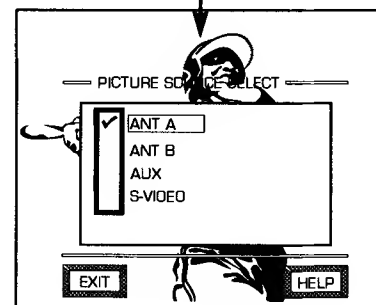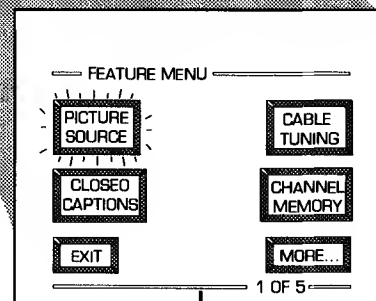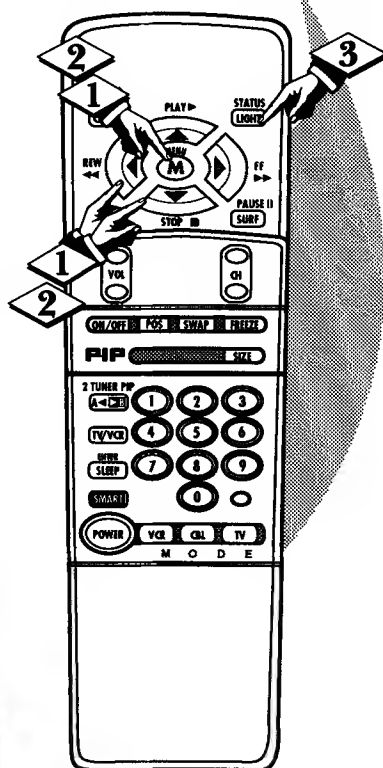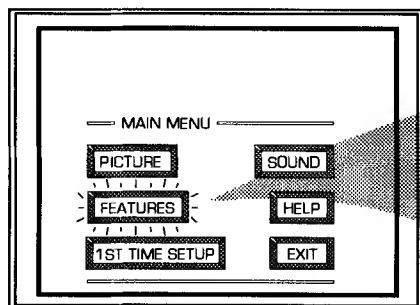

## SMART HELP



Remember, the AUX and S-VIDEO modes must have a video signal source connected (to their INPUT plug) or the TV screen will be blank. (See pages 24-25 for connection details).



# FEATURE MENU CONTROLS

## CLOSED CAPTION

**C**losed Captioning (CC) allows you to read the voice content of television programs on the TV screen. Designed to help the hearing impaired this feature uses on-screen "text boxes" to show dialogue and conversations while the TV program is in progress.

### BEGIN

- 1 Select CLOSED CAPTIONING control.

With the FEATURES MENU on screen, move the RED highlight with the MENU (M) buttons. Then press the MENU button.

- 2 Press the MENU ▲▼ buttons to move the RED highlight. Press the MENU button to select (✓) the desired Closed Caption mode - For Example: "ALWAYS ON" and "CAPTION 1".

### CAPTION 1, 2, 3, 4:

dialogue (and descriptions) for the action on the captioned TV program shows on-screen. (See Important Note on this page.)

### TEXT 1, 2, 3, 4:

often used for channel guide, schedules, or bulletin board information for CC programs.

- 3 After making your Caption mode selection, press the STATUS button to clear the TV screen. The selected Closed Caption mode will be active.

To cancel, set the Closed Captioned feature to OFF when finished.

 
 
 
STOP

## SMART HELP





Remember. Broadcast stations will often use spelling abbreviations, symbols, dropouts and other grammatical shortcuts in order to keep pace with the on-screen action. These type factors vary upon the source of the captioned text material and do not indicate a need for service on the part of the TV.


**NOTE: Not all TV programs and product commercials are made for broadcast with Closed Caption (CC) information included. Neither are all Closed Caption modes (CAPTION 1-4; or TEXT 1-4) necessarily being used by a broadcast station during the transmission of a closed caption program. Usually "CAPTION 1" is the most used mode to view captioned material. Refer to your area's TV program listings for the stations and times of Closed Caption shows.**

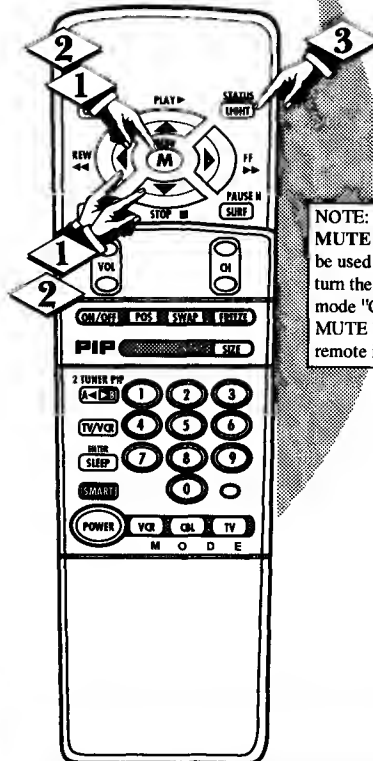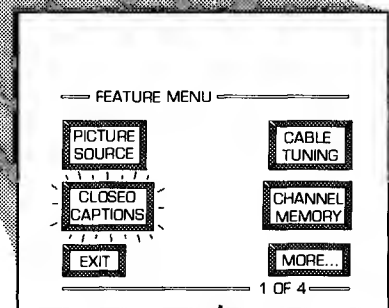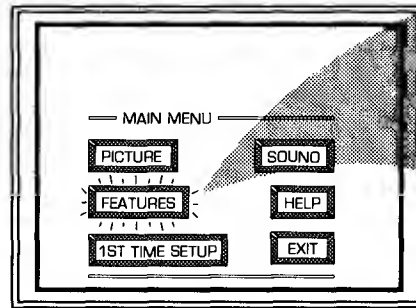

  **NOTE:** The ON DURING MUTE ONLY control can be used to set the TV to turn the Closed Caption mode "ON" whenever the MUTE button on the remote is pressed.

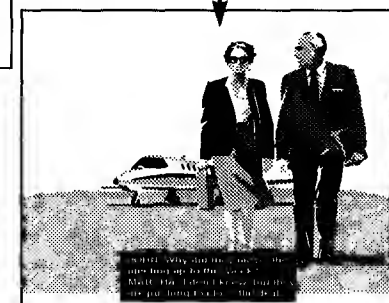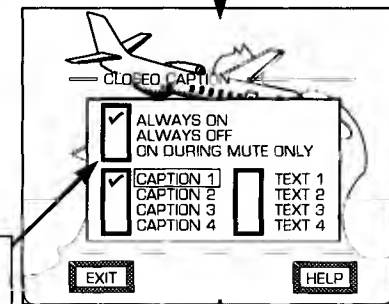

CAPTION 1 mode  
Example Screen Display

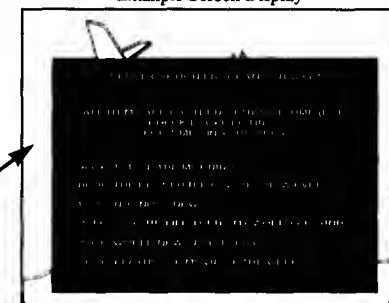 

FULL SCREEN TEXT  
will block TV screen from viewing

Closed Caption information will usually appear in black and white (although some broadcasters or networks may occasionally use color to highlight or draw attention to certain areas.)

This symbol will appear on channels that contain Closed Captioning material whenever the status display is shown.

CC  
12:00



## CABLE TUNING

**You need to make sure the TV is set to pick up either Cable TV or Antenna signals. In other words, the TV needs to know if you connected a Cable TV signal or a normal antenna to its ANTENNA plug.**

**NOTE:** If you went through First Time Setup (in your Quick Use Guide), this task has already been completed for you.

### (BEGIN)

- 1 Select **CABLE CHANNEL TUNING** control.

 
 
 
 
With the **FEATURES** MENU on screen, move the **RED** highlight with the **MENU (M)** buttons. Then press the **MENU** button.

- 2 Press the **MENU ▲▼** buttons to move the **RED** highlight. Press the **MENU** button to select (✓) the desired mode - For Example: **CABLE**.

**CABLE-** If you **DO** have **Cable TV** connected to the TV. Channels 1-125 available.

**NORMAL-** If you have an **Antenna** connected to the TV. Channels 2-69 available.

- 3 Press the **STATUS** button to clear the screen.

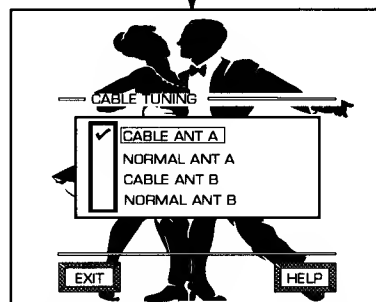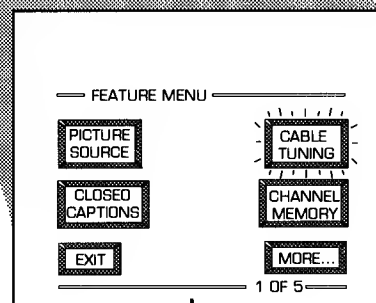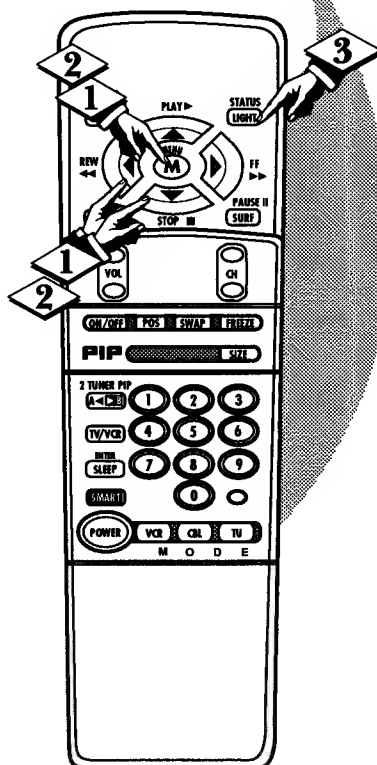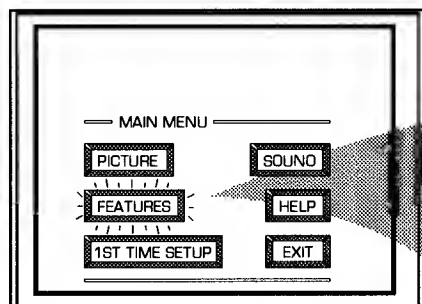

**Note:** Both **ANT(enna) A** and **ANT B** inputs on the rear of the TV can be set for the correct connected signal (either an Antenna or Cable TV source).

# FEATURE MENU CONTROLS

## CHANNEL MEMORY AUTO-PROGRAMMING

**Y**our TV can automatically set itself for local area (or Cable TV) channels. This makes it easy for you to select only the TV stations in your area when the CHANNEL ▲▼ buttons are pressed.

**NOTE:** If you went through First Time Setup (in your Quick Use Guide), this task has already been completed for you.

### BEGIN

- 1 Select CHANNEL MEMORY (START AUTO-PROGRAMMING) control.

With the FEATURES MENU on screen, move the RED highlight with the MENU (M) button. Then press the MENU button.

- 2 Press the MENU button to turn AUTO-PROGRAMMING ON.

The TV shows which channel numbers are "SAVED" (✓) as they are added into memory.

"Auto-programming CHANNEL MEMORY is finished" shows when the TV is through adding channels.

- 3 Press the STATUS or Menu (M) button to clear the screen.

STOP

 
 
 
 
 
## SMART HELP



Try it out. Press the CHANNEL ▲▼ buttons and see which channels you can select.

Remember, an Antenna or Cable TV signal must first be connected to your TV so that channels can be saved.

If you want to delete any unwanted channels from the TV's memory, see "ADD/DELETE CHANNELS" on the next page.

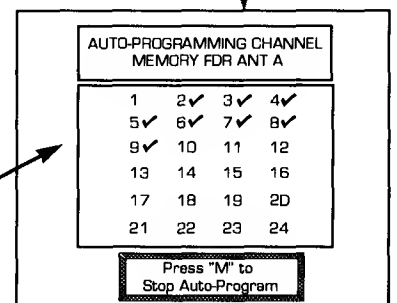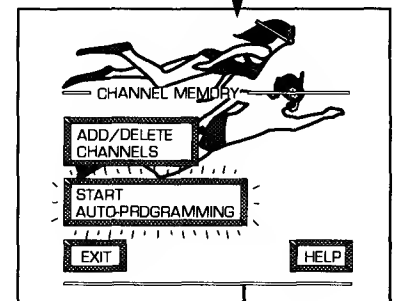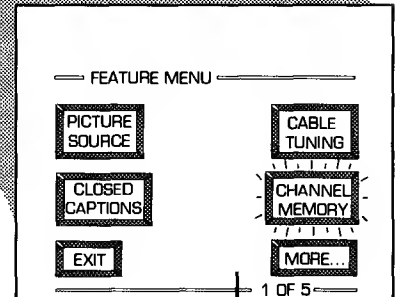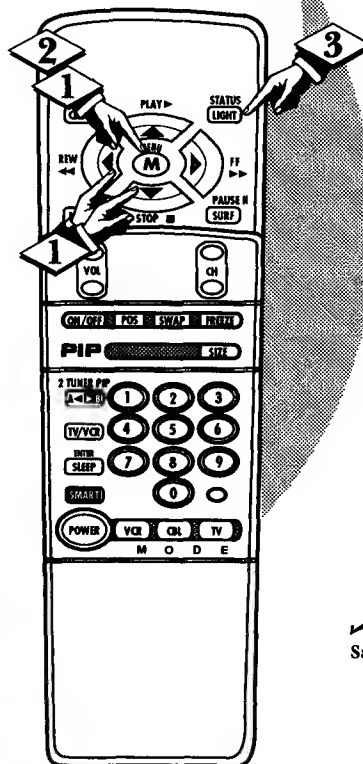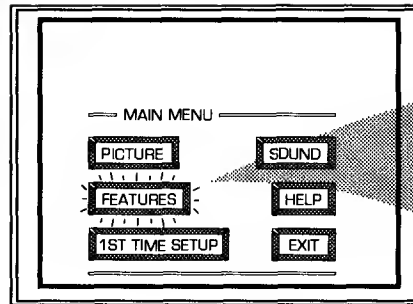

✓ Channel Numbers are Saved in Memory

## ADD/DELETE CHANNELS

**A**uto-Programming (see *previous page*) adds all the channels it can find (on your Antenna or Cable TV system) into the TV's memory. Add/Delete Channels makes it easy for you to add other channels, or drop unwanted channels, from the list of channels in the TV's memory.

### BEGIN

- 1 Select **CHANNEL MEMORY (ADD/DELETE CHANNELS)** control.

With the **FEATURES MENU** on screen, move the **RED** highlight with the **MENU (M)** buttons. Then press the **MENU** button.

- 2 Press the **CHANNEL ▲▼** or **number** buttons to select the channel you want to add or delete.

 
 
 
 
 
- 3 Press the **MENU ►** button to **ADD** the channel into the TV's memory.

Press the **MENU ◀** button to **DELETE** the channel from memory.

Repeat steps 2 and 3 for each channel you wish to add or delete.

- 4 Press the **STATUS** or **MENU** button to clear the screen when through.

**STOP**

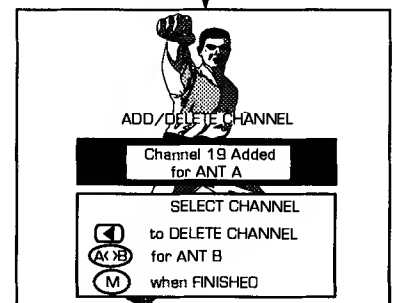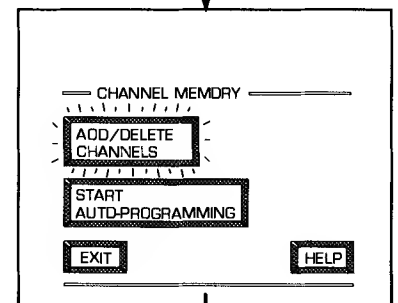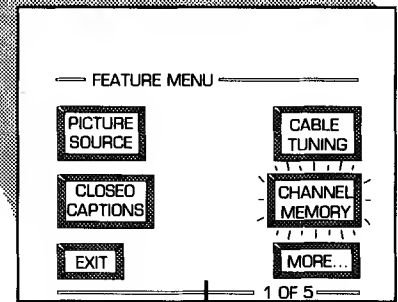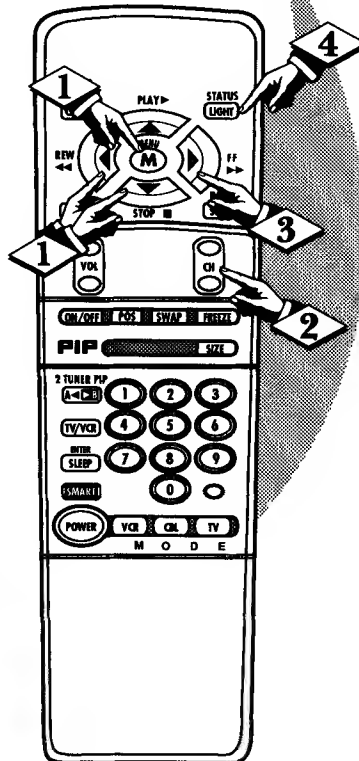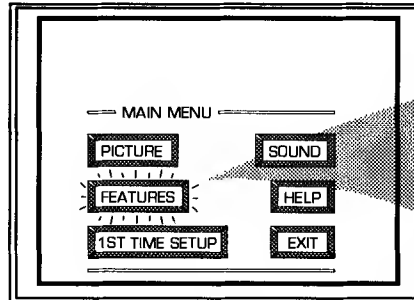

**NOTE:** A separate **ADD/DELETE CHANNEL** memory may also be created for the **ANT(enna) B** Input on the rear of the set (if an Antenna or Cable TV signal has been connected). Just press the **(A/B)** button on the remote, while in the **ADD/DELETE CHANNEL** mode, to switch between the **ANT A** and **ANT B** channel memory lists. Then follow steps 2 and 3 as shown to the left to add or delete the desired channels.

## SMART HELP



Remember. You can also add the **AUX** and **S-VIDEO** modes just like a channel. Then by pressing the **CHANNEL ▲▼** buttons the **AUX(iliary)** mode can quickly be selected to use the desired set of Input jacks on the TV (see pages 24-25).

**Note:** **AUX** and **S-VIDEO** modes will be located between the lowest and highest channel numbers within the **ADD/DELETE CHANNEL** control screen.

## SET CLOCK

Your TV comes with an on-screen clock. During normal operation the clock appears on the screen with every channel change (and when the STATUS button is pressed).

**NOTE:** If you went through First Time Setup (in your Quick Use Guide), this task has already been completed for you.

### BEGIN

- 1 Select SET CLOCK control.

With FEATURES MENU (2 of 5) on screen, move the RED highlight with the MENU (M) buttons. Then press the MENU button.

- 2 Press the remote's number buttons to set the time clock.

- 3 Press the STATUS button to set the clock in operation and clear the screen.

STOP

 
 
 
 
 
 
## SMART HELP



Remember, be sure to press "0" first and then the hour number for single digit entries.

The remote's MENU (M) buttons can also be used to set the hours, minutes and AM/PM portions of the clock.

TV Clock settings may be lost when the TV is unplugged (or AC power to the set is interrupted.)

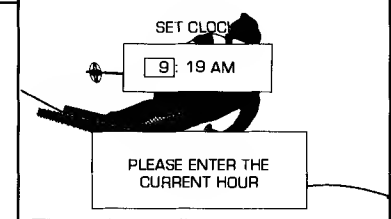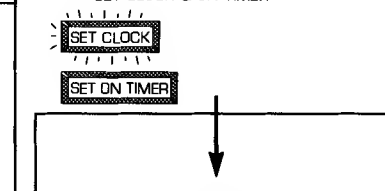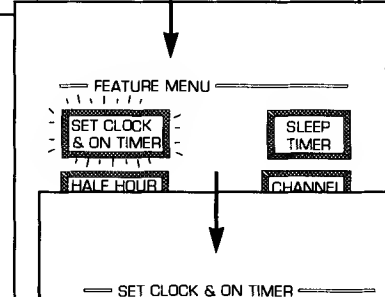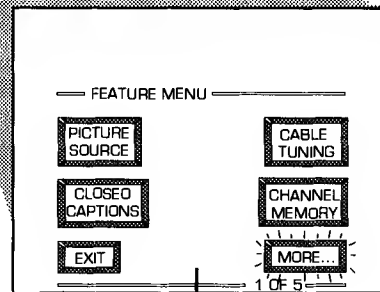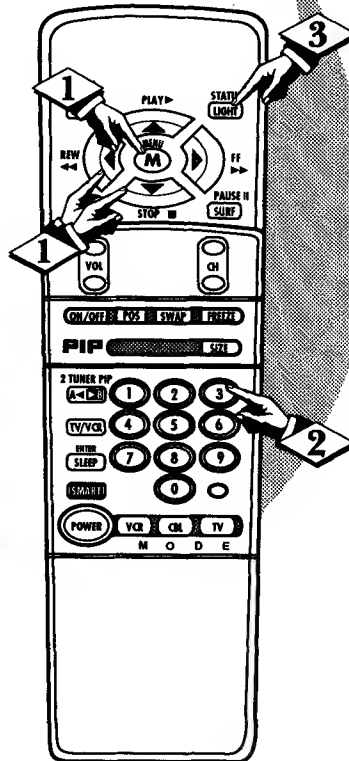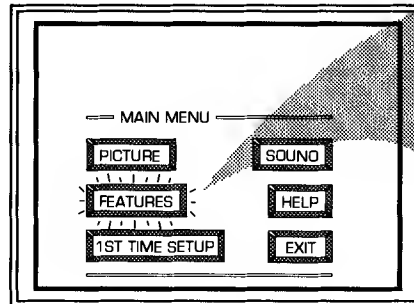

## SET ON TIMER

*Just like an alarm clock you can set the TV to turn itself on at the same time everyday.*

### BEGIN

- 1 Select SET ON TIMER control.

With FEATURES MENU (2 of 5) on screen, move the RED highlight with the MENU (M) buttons. Then press the MENU button.

 
- 2 Press the MENU ▲▼ and MENU (M) buttons to highlight and select "ON" (✓).

- 3 Press the MENU ▲▼ and then the MENU (M) buttons to select "SET ON TIME".

- 4 Press the remote's number buttons to set the "TURN ON" time for the TV. (Press MENU ▲▼ for AM or PM.)

- 5 Press the STATUS button to set the "ON TIME" and clear the screen.

STOP

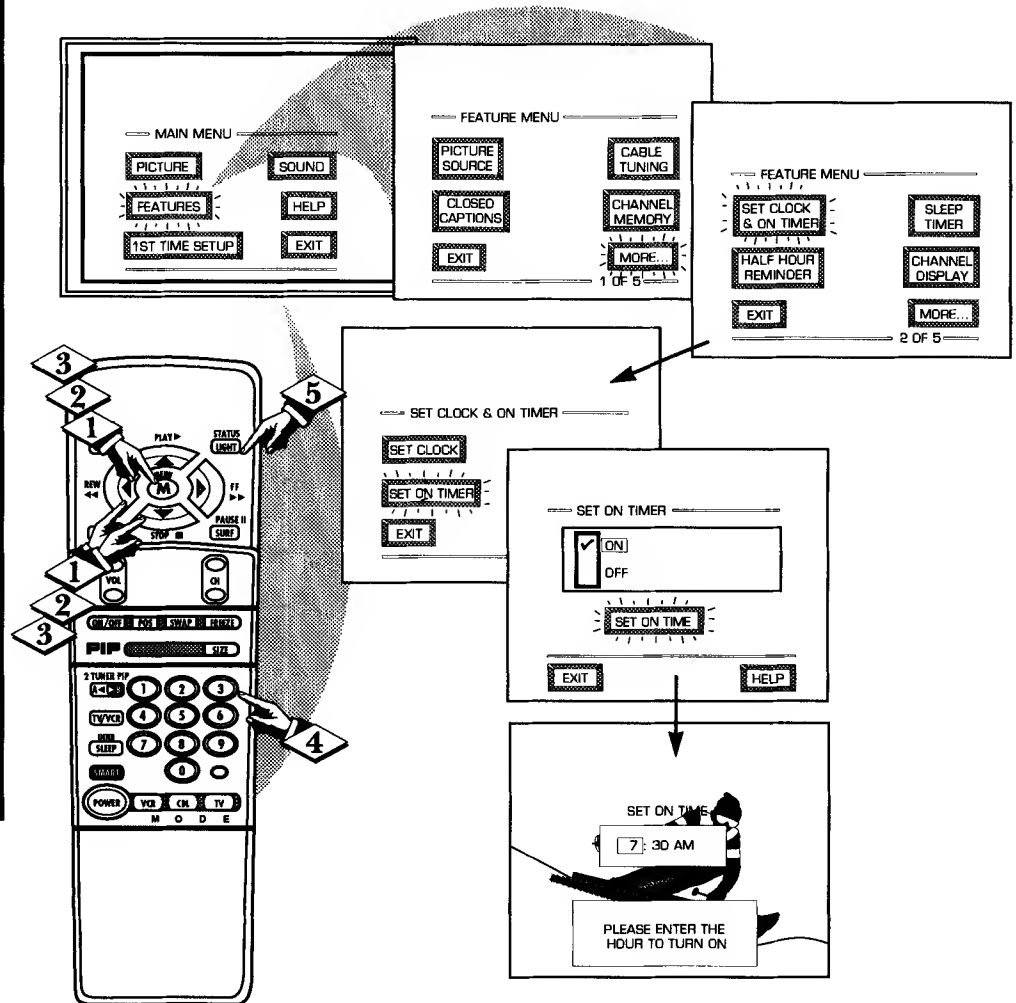

## SLEEP TIMER

*Have you ever fallen asleep in front of the TV only to have it wake you up at two in the morning with a test pattern screeching in your ears? Well, your TV can save you all that trouble by automatically turning itself off.*

### BEGIN

- 1 Press the **SLEEP** button on the remote control.

Note: you can also select the SLEEP control with the TV's on-screen FEATURES MENU (2 of 5). Move the RED highlight with the MENU (M) button. Then press the MENU button.

- 2 Press the **SLEEP** button repeatedly to pick the amount of time (15 minutes to 2 hours ahead) before the TV will turn itself off.

The (+), (-) buttons can also be used to set the amount of time.

- 3 Press the **STATUS** or **MENU** (M) button to clear the screen after you have set the time for the TV to turn off.

STOP

 
 
 
 
 
## SMART HELP



Remember, to see how many minutes are left before the TV shuts itself off, reselect the SLEEP TIMER control screen.

To stop a SLEEP TIMER setting, reset the timer back to OFF. (Turning the TV off and on, or pressing a button during the last minute of a timer setting, will also cancel a setting.)

A few seconds before the TV is to shut off a message will come on the screen telling you *GOOD NIGHT*.

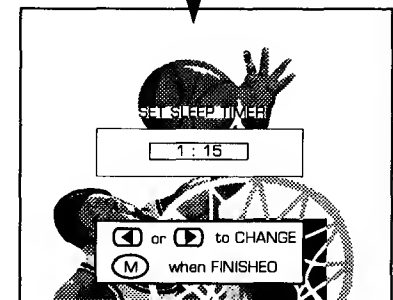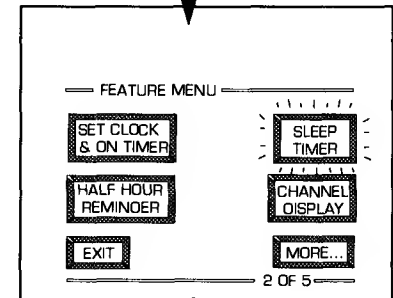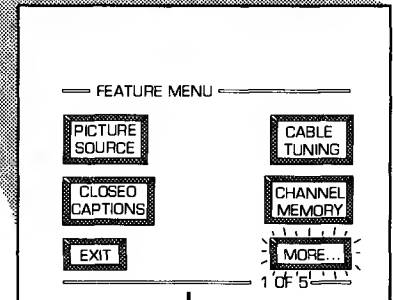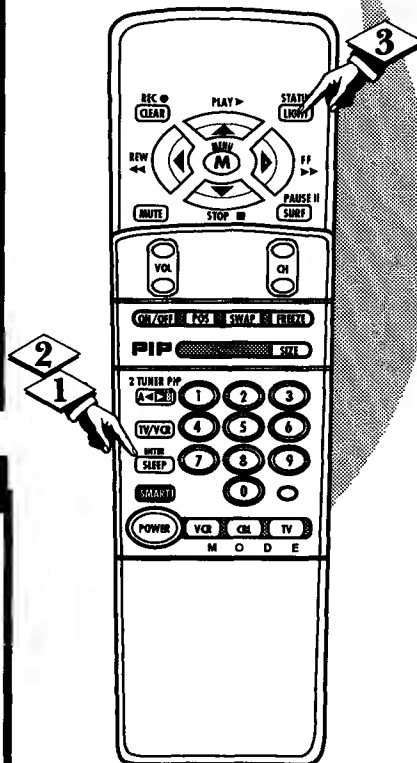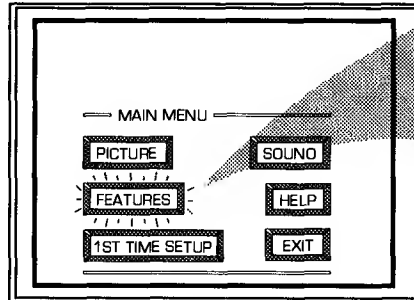



## CHANNEL DISPLAY

**W**ith the Channel Display control you can change the size and location of the on screen channel and clock information.

### BEGIN

- 1 Select CHANNEL DISPLAY control.

With FEATURES MENU (2 of 5) on screen, move the RED highlight with the MENU (M) buttons. Then press the MENU button.

- 2 Press the MENU ▲▼ and MENU (M) buttons to highlight and select (✓) the LARGE or SMALL display control.

- 3 Press the STATUS button to clear the screen.

STOP

 
 
 
 
 
 
## SMART HELP



Try it out.

Press the CHANNEL ▲▼ buttons and you should see the Display Size you selected.

Remember. The SMALL SIZE display shows only the channel number, not the time (or clock).

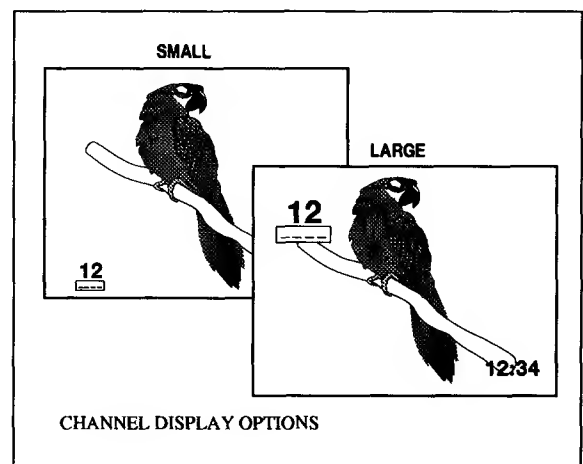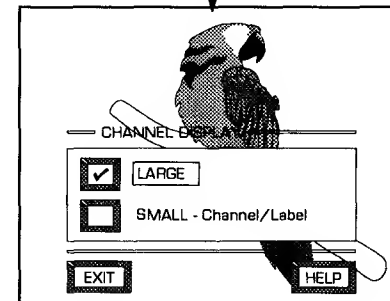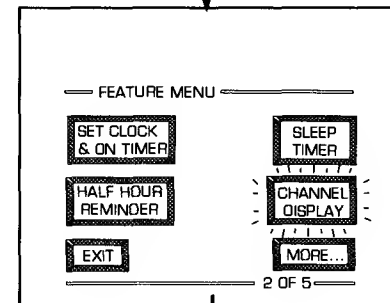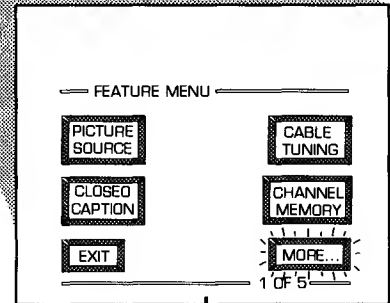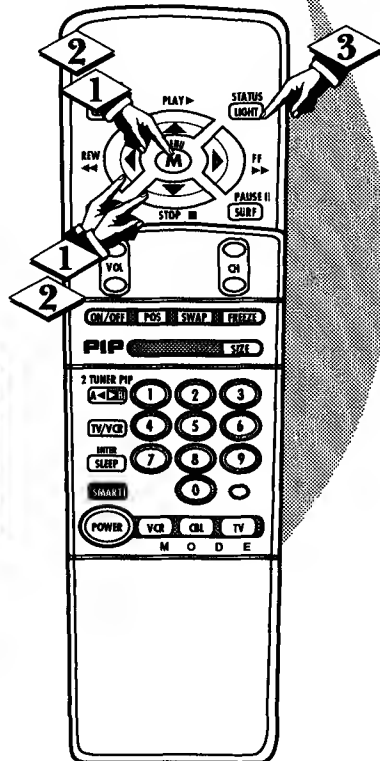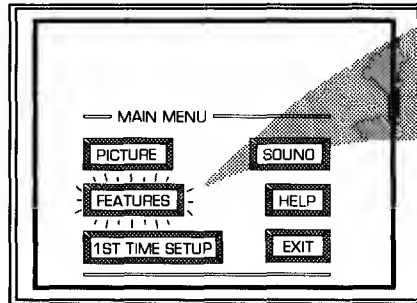



## HALF HOUR REMINDER

**W**ith the Half Hour Reminder control the TV automatically shows you the current time and channel every thirty minutes.

### BEGIN

- 1 Select **HALF HOUR REMINDER** control.

With FEATURES MENU (2 of 5) on screen, move the RED highlight with the MENU (M)  buttons. Then press the MENU button.

- 2 Press the MENU  and MENU (M) buttons to highlight and select (✓) the EVERY HALF HOUR item.

- 3 Press the STATUS button to clear the screen.

 
 
 
 
 
STOP

## SMART HELP



Remember.

The Time and Channel Reminders will show on the hour and the half-hour for about five seconds.

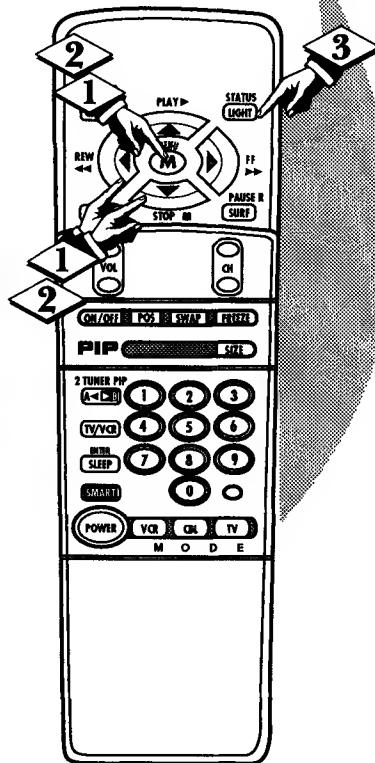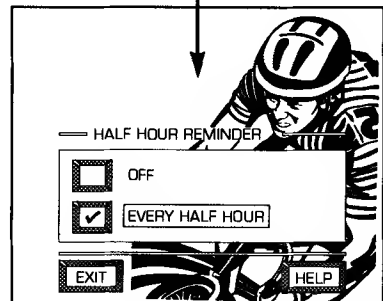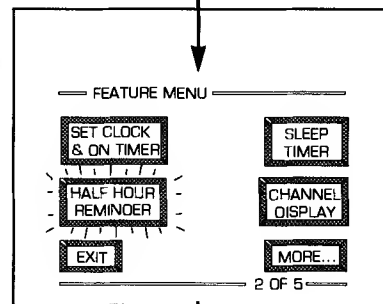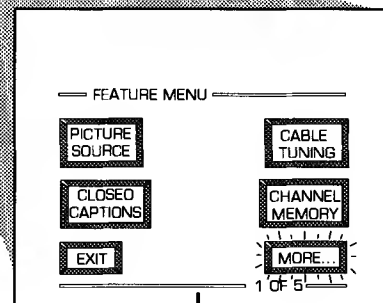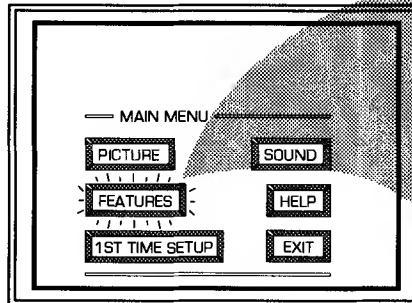

## LANGUAGE

**Note:** If you went through First Time Setup, This task has already been completed for you.

For our Spanish and French speaking TV owners an on-screen LANGUAGE option is present. With the LANGUAGE control you can set the TV's on-screen features to be shown in either English, Spanish or French.

### BEGIN

- 1 Select the LANGUAGE DISPLAY control.

With FEATURES MENU (3 of 5) on screen, move the RED highlight with the MENU (M) button. Then press the MENU (M) button.

- 2 Press the MENU ▲▼ and MENU (M) buttons to highlight and select (✓) English, Spanish (ESPAÑOL), or French (FRANCAIS) on the display control.

 
 
 
 
 
 
Text for the on-screen Menu will change to the selected language.

- 3 Press the STATUS button to clear the screen.

STOP

### SMART HELP

Remember, the Language control only makes the TV's on-screen (MENU) items appear in English, Spanish, or French text. It does not change the other on-screen text features such as Closed Captioned (CC) TV shows.

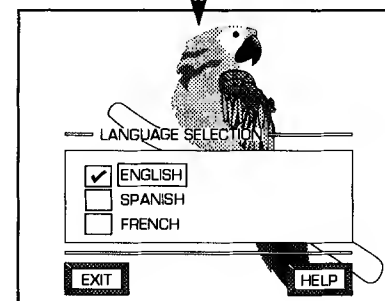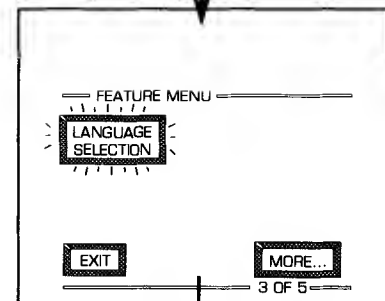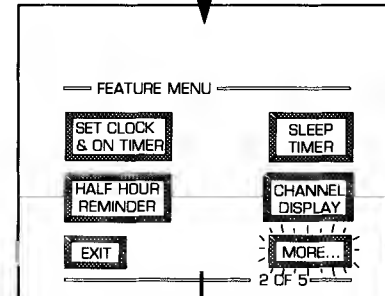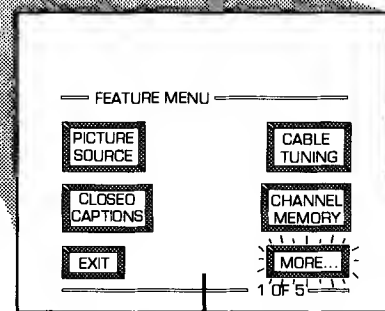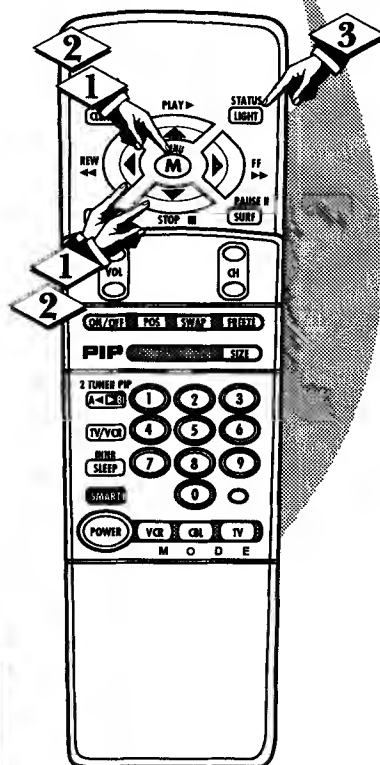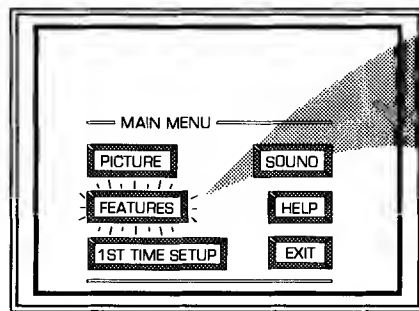


# SOUND MENU CONTROL ADJUSTMENTS

## BASS, TREBLE, BALANCE

**Y**our TV also has individual sound adjustment controls. The **BASS** (low frequency), **TREBLE** (high frequency), and **Speaker BALANCE** may all be used to adjust the sound playback of TV programs.

### BEGIN

 
 
 
- 1 Select **BASS**, or **TREBLE**, or **BALANCE** sound control.

With the **SOUND MENU** on the screen, move the **RED** highlight with the **MENU (M)**  buttons. Then press the **MENU** button.

- 2 Press the **(+)** or **(-)** buttons to adjust the sound control to levels you prefer.

- 3 Press the **STATUS** button to clear the screen.

STOP

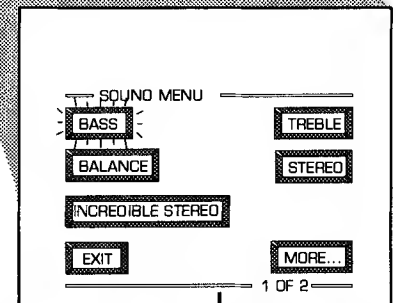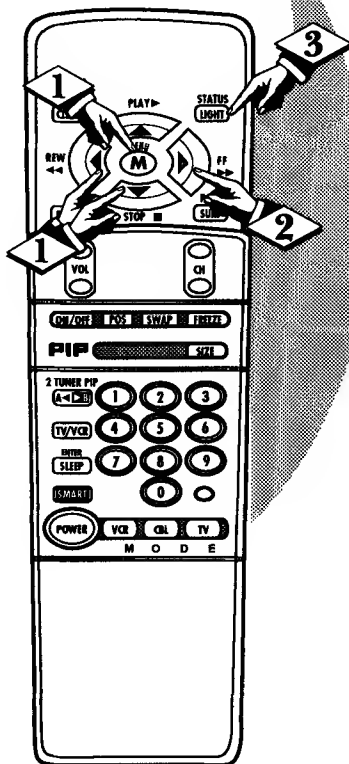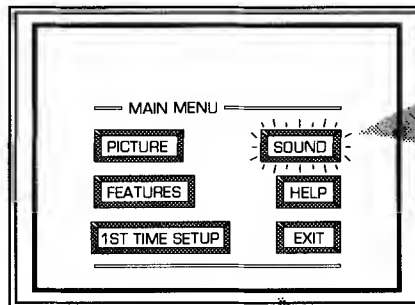

Select and then press **MENU (M)** button to view additional controls grouped under same feature heading. For Example: Treble, Balance, Bass Boost, Stereo, etc.

## STEREO

**Y**our TV is able to receive broadcast stereo TV programs. The TV is equipped with an amplifier and twin speaker system through which the stereo sound can be heard.

### BEGIN

 
 
- 1 Select **STEREO** sound control.

With the **SOUND MENU** on the screen, move the **RED** highlight with the **MENU (M)** buttons. Then press the **MENU** button.

- 2 Press the **MENU**  $\blacktriangle$  $\blacktriangledown$  and **MENU (M)** buttons to highlight and turn **ON** ( $\checkmark$ ) the **STEREO** mode.

- 3 Press the **STATUS** button to clear the screen.



STOP

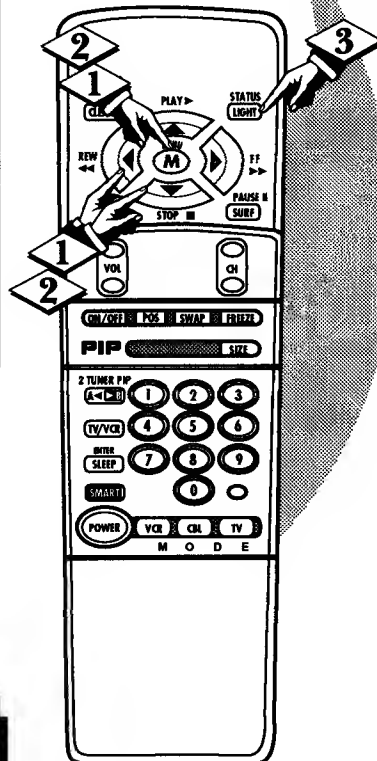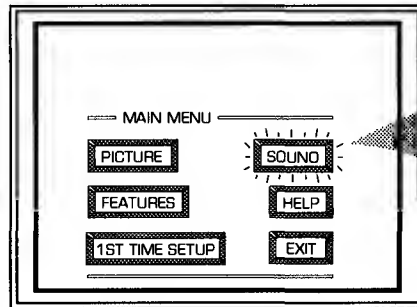

## SMART HELP



  
**Remember.**  
If a stereo signal is not available and the TV is placed in the **STEREO** mode, sound coming from the TV will remain monaural (mono).

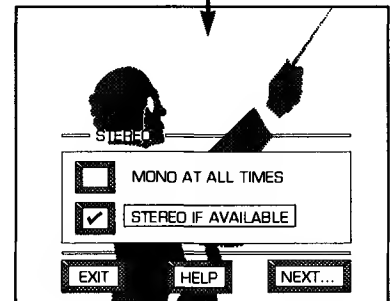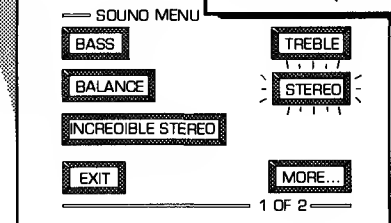


## SECOND AUDIO PROGRAM

Second Audio Program (SAP) is part of the stereo broadcast system. Sent as a additional audio channel SAP can be heard apart from the current TV program sound. TV stations are free to use SAP for any number of purposes, but many experts believe it will be used for foreign language translations of TV shows (or for weather and news bulletins.)

 **NOTE:** If a SAP signal is not present with a selected program, the SAP option can not be selected. "This program does not contain SAP information" will show on the TV screen.

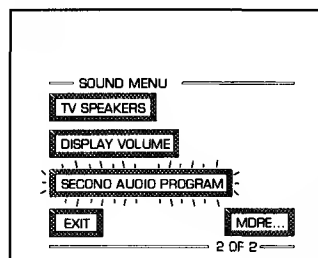

**SECOND PROGRAM SOUND CAN ONLY BE SELECTED ( $\checkmark$ ) WHEN SAP INFORMATION IS PRESENT ON CURRENT CHANNEL.**

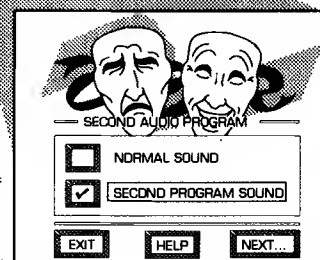 

## INCREDIBLE STEREO

*The Incredible Stereo control can be used to add greater depth and dimension to both monaural (MONO) and STEREO TV sound.*

**BEGIN**

 
 
 
 
- 1 Select **INCREDIBLE STEREO** control.

With the **SOUND MENU** on the screen, move the **RED** highlight with the **MENU (M)** buttons. Then press the **MENU** button.

- 2 Press the **MENU** **▲▼** and **MENU (M)** buttons to highlight and turn **ON** (✓) the **INCREDIBLE STEREO** mode.

For Example: "MAXIMUM" spreads the Incredible Stereo effect as wide as possible.

- 3 Press the **STATUS** button to clear the screen.

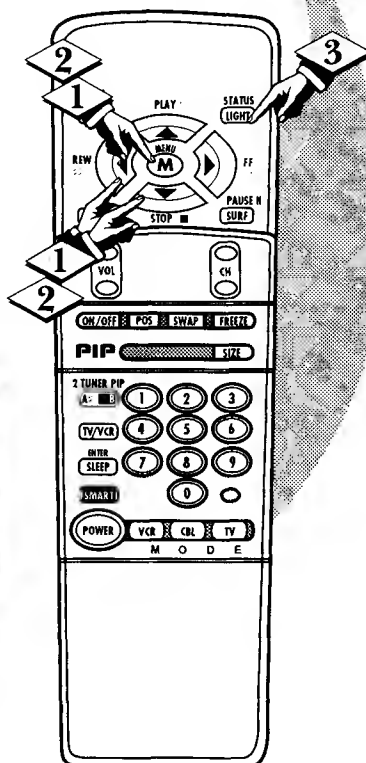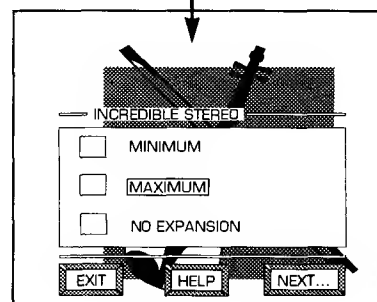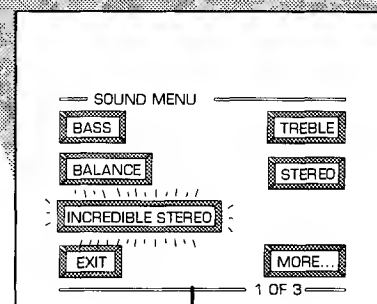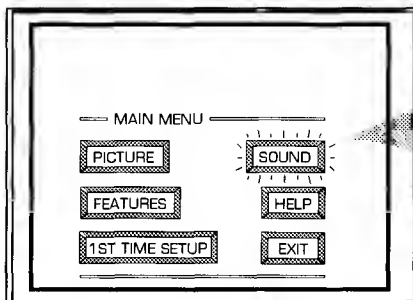

## SMART HELP



Remember, with the Incredible Stereo control turned **ON** even monaural (mono) audio source material can be heard through rear Surround Sound speaker connections. Note: The monaural version of Surround Sound may be louder at the rear set of speakers than what is normally heard with true stereo signal Surround Sound - but this is normal.



## DISPLAY VOLUME

Use the **DISPLAY VOLUME** control to see the TV's volume level settings on the TV screen. Once set the Volume Display will be seen each time the **VOLUME** buttons (on the TV or remote) are pressed. **BEGIN**

- 1 Select **DISPLAY VOLUME** control.

With **SOUND MENU** (2 of 2) on screen, move the **RED** highlight with the **MENU** (M) and **UP** (▲) buttons. Then press the **MENU** button.

 
 
 
 
 
- 2 Press the **MENU** (M) and **MENU** (M) buttons to highlight and turn ON (✓) the **DISPLAY VOLUME** control.

- 3 Press the **STATUS** button to clear the screen.

**STOP**

## SMART HELP

Remember, "DURING ADJUSTMENT" means the volume level will be on screen whenever the Volume buttons are pressed.

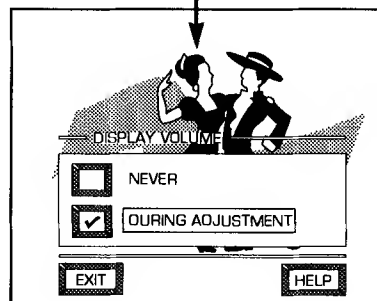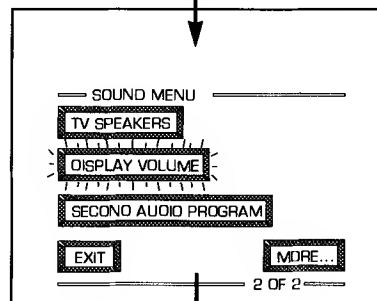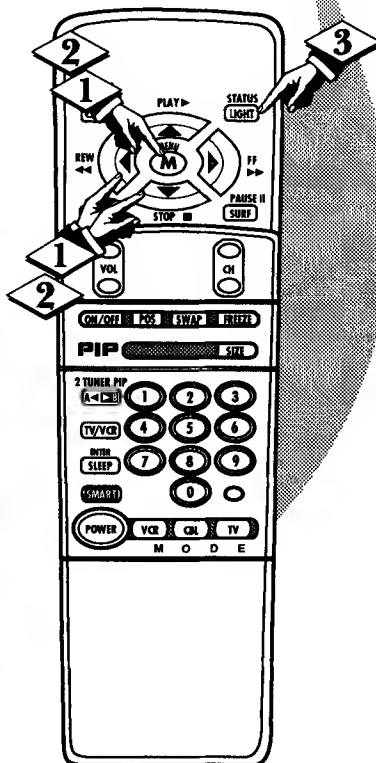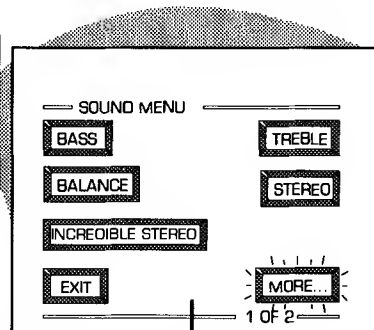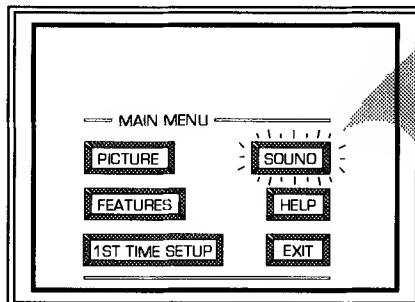

## TV SPEAKERS

**W**ould you like to hear TV programs through your audio hi-fi system? The TV's Audio Output jacks and TV Speaker On/Off control work together to offer you this TV sound option.

### BEGIN

- 1 **Connect the R(ight) and L(ef) AUDIO OUT** jacks on the TV to the R and L Audio Input jacks on your amplifier or sound system.

Set the audio system's volume to normal listening level.

- 2 **Turn the TV** and audio system **ON**. You can now adjust the sound level coming from the audio system with the Volume ▲▼ buttons on the television.

- 3 To hear the TV sound from only the audio system speakers, **select TV SPEAKERS** control.

With **SOUND MENU (2 of 2)** on screen, move the **RED** highlight with the **MENU (M)** ◀▶ buttons. Then press the **MENU** button.

- 4 **Press the MENU ▲▼ and MENU (M)** buttons to highlight and turn **OFF (✓)** the **TV SPEAKERS** control.

You should now only hear TV sound coming from the audio system speakers.

 
- 5 **Press the STATUS** button to clear the screen.

STOP

### SMART HELP



Remember, the audio system may have to be in **AUX(iliary)** mode to play sound from the TV (Outputs).

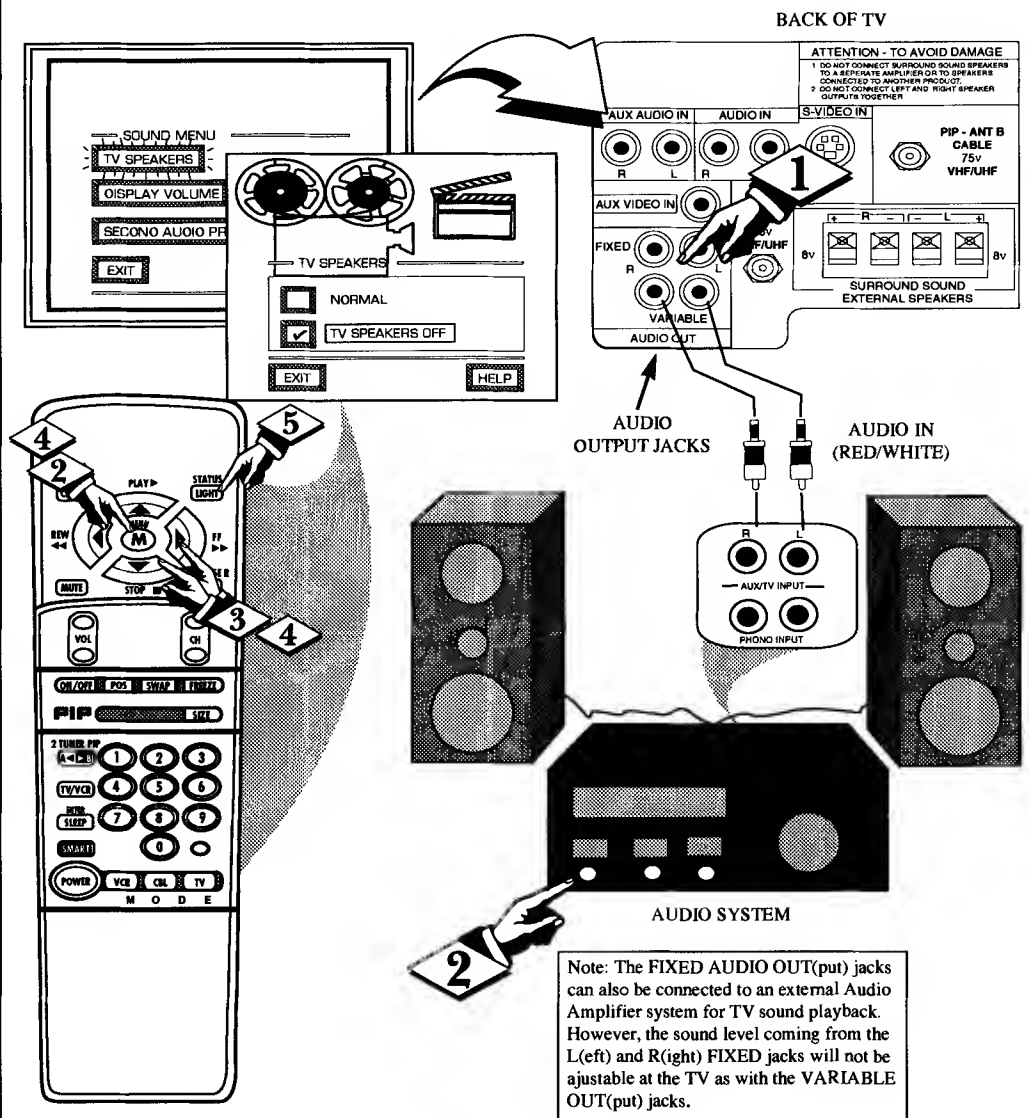



## AUX INPUTS

The TV's Audio/Video Input jacks are for direct picture and sound connections between the TV and a VCR (or Video Disc Player, etc.) that has Audio/Video Output jacks.

To view the playback of a VCR tape by using the Audio/Video Input jacks on the TV:

### BEGIN

- 1 Connect the VIDEO OUT jack from the VCR to the VIDEO IN jack on the TV.
- 2 Connect the AUDIO OUT jacks R(right) and L(left) from the VCR to the AUDIO IN jacks on the TV.
- 3 Select the "VCR/AUX" PICTURE SOURCE SELECT control on the TV.  
With the FEATURES MENU on screen, move the RED highlight with the MENU (M) buttons. Then press the MENU button.
- 4 Press the MENU ▲▼ and MENU (M) buttons to highlight and select (✓) the AUX mode.
- 5 Turn the VCR ON and press PLAY to view the tape on the TV.

 
STOP

## SMART HELP



Remember, after it is connected an easy way to select the AUX mode is to press the TV/VCR button on the remote. Channels 3 and 4 can also be selected in this way.

If you have added AUX to the TV's channel memory (see page 11), just press the CHANNEL ▲▼ buttons to select the AUX mode.

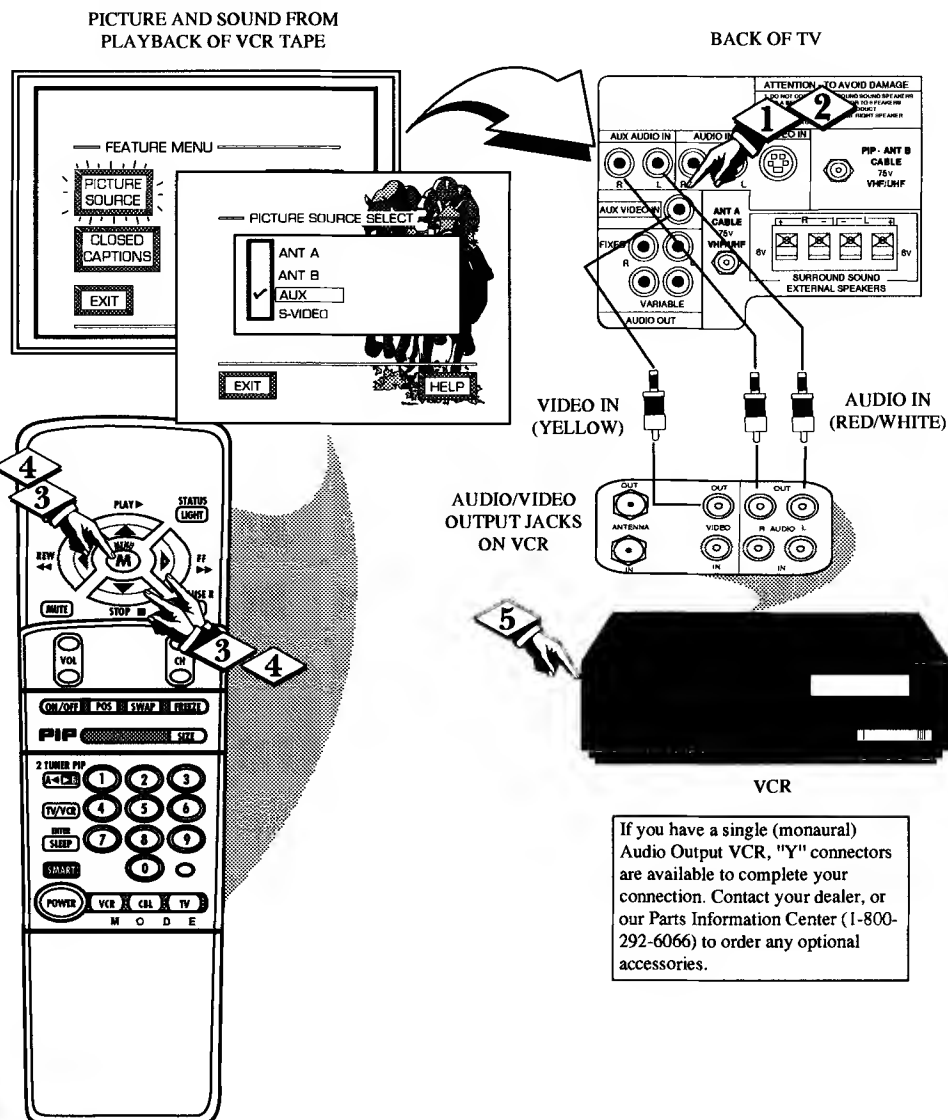

If you have a single (monaural) Audio Output VCR, "Y" connectors are available to complete your connection. Contact your dealer, or our Parts Information Center (1-800-292-6066) to order any optional accessories.

## S-VIDEO INPUTS

**T**he S(uper)-Video connection on the rear of the TV can give you better picture detail and clarity, for the playback of S-VHS VCR tapes or Video Discs, than the normal antenna picture connections.

*Note: The VCR (or Video Disc Player) must have a S-VIDEO OUT(put) jack in order for you to complete the connections shown on this page.*

### (BEGIN)

- 1 Connect the S-VIDEO (S-VHS) OUT jack from the VCR to the S-VIDEO jack on the TV.

The S-VIDEO connecting cable will be supplied with the S-VHS VCR (or Video Disc Player).

- 2 Connect the AUDIO OUT jacks R(ight) and L(ef) from the VCR to the AUDIO IN jacks on the TV.

 
- 3 Select the "S-VIDEO" PICTURE SOURCE control.

With the FEATURES MENU on screen, move the RED highlight with the MENU (M) buttons. Then press the MENU button.

- 4 Turn the VCR ON and place it in the S-VIDEO (or S-VHS) playback mode. Insert S-VHS cassette tape and playback in a normal manner.

STOP

PICTURE AND SOUND FROM  
PLAYBACK OF S-VHS VCR TAPE

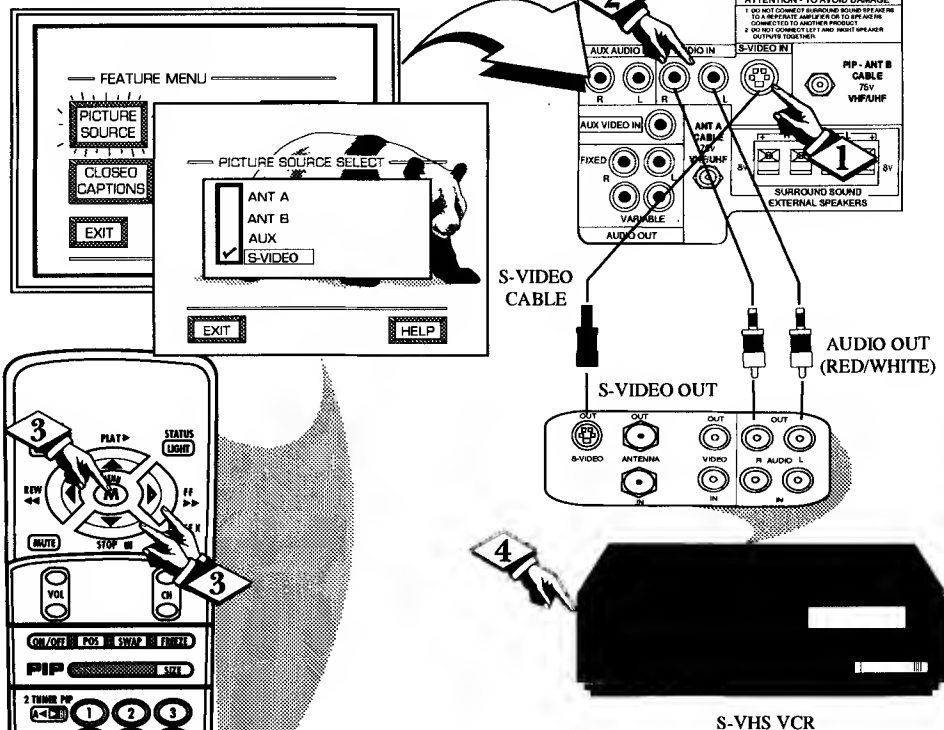

**NOTE:** A CD-i (Compact Disc Interactive) player, Video Game, or other S-VIDEO accessory can be hooked up to the TV using this type of connection. Please be aware that such video sources, which show a constant non-moving pattern on the TV screen, can cause picture tube damage. When not in use turn your video accessories OFF. Also, regularly alternate the use of video sources with normal TV viewing.

## SMART HELP



Remember, after it is connected an easy way to select the S-VIDEO mode is to press the TV/VCR button on the remote.

If you have added S-VIDEO to the TV's channel memory, just press the CHANNEL ▲▼ buttons to select the S-VIDEO mode.



## REMOTE CONTROL OPERATION (CONTINUED)

**H**ave you ever played hide and seek with your remote control? Are you tired of tearing the house apart trying to find if someone has stuffed the remote under the couch, put it on the shelves, or hid it in the desk? Well, your TV remote can save you all that looking by automatically signaling its location to you.

Here's how it works:

### BEGIN

- 1 Press the **POWER** button on the set to turn the TV ON.

Note: Normally you can press any button on the front of the TV to turn the set ON. But for the remote locator to work you need to be sure to use the Power button at the TV.

A "locating remote" message shows on the TV screen.

- 2 Within a few seconds a chirping or beeping sound will begin to come from the remote control hand unit.

The remote will continue to signal its location for around 30 seconds. Normal TV program sound will not be heard while the remote locator is working.

- 3 Once you find the remote just press any button on the remote and the beeping sound will stop.

The remote is now ready for normal TV feature use.

 
STOP

### SMART HELP




Remember, the remote locator may not properly receive its "homing" signal from the TV if it has been placed on a metal shelf or counter material.

Also, since there's a special type of radio frequency "homing" signal receiver inside the remote we are required to notify you that any changes or modifications not expressly approved by Philips Consumer Electronics Company could void the user's authority to operate the remote equipment.

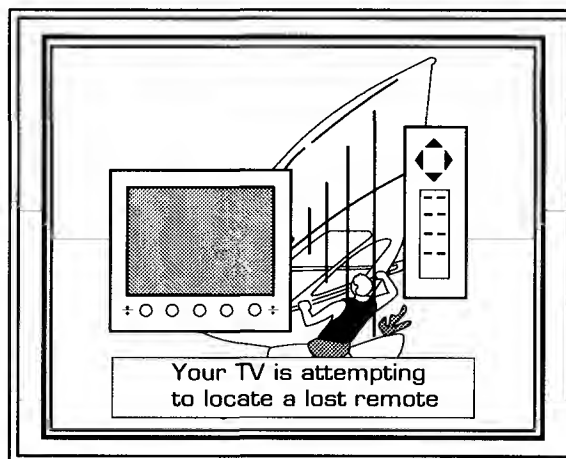

 Remote Locator "homing" range is around 30 Feet.

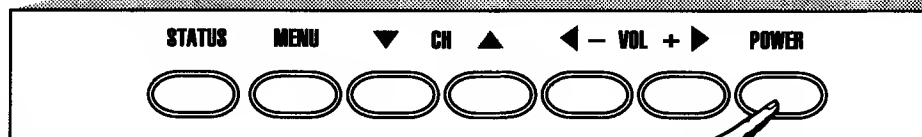

1





## ADDRESS CODE PROGRAMMING OF REMOTE

*For most homes this step would not be needed but for your information:*

*Up to 9 different remote locator address codes can be set on which the TV can send out its "homing" signal.*

*This is done in case there is more than one TV (with a remote locator) present, and you want only one specific remote to be signaled when the TV is turned ON.\**

To set a Locator Address Code:

### BEGIN

 
- 1 With TV turned ON, press the **LOCATOR CODE** button on the remote. (Also be sure the TV **SYSTEM** button on the remote has been pressed.)

You will need a pencil or pen to press the recessed button.

The TV shows the present Remote Locator Code.



- 2 Press any number button (0-9) on the remote to set or change the Locator Code.

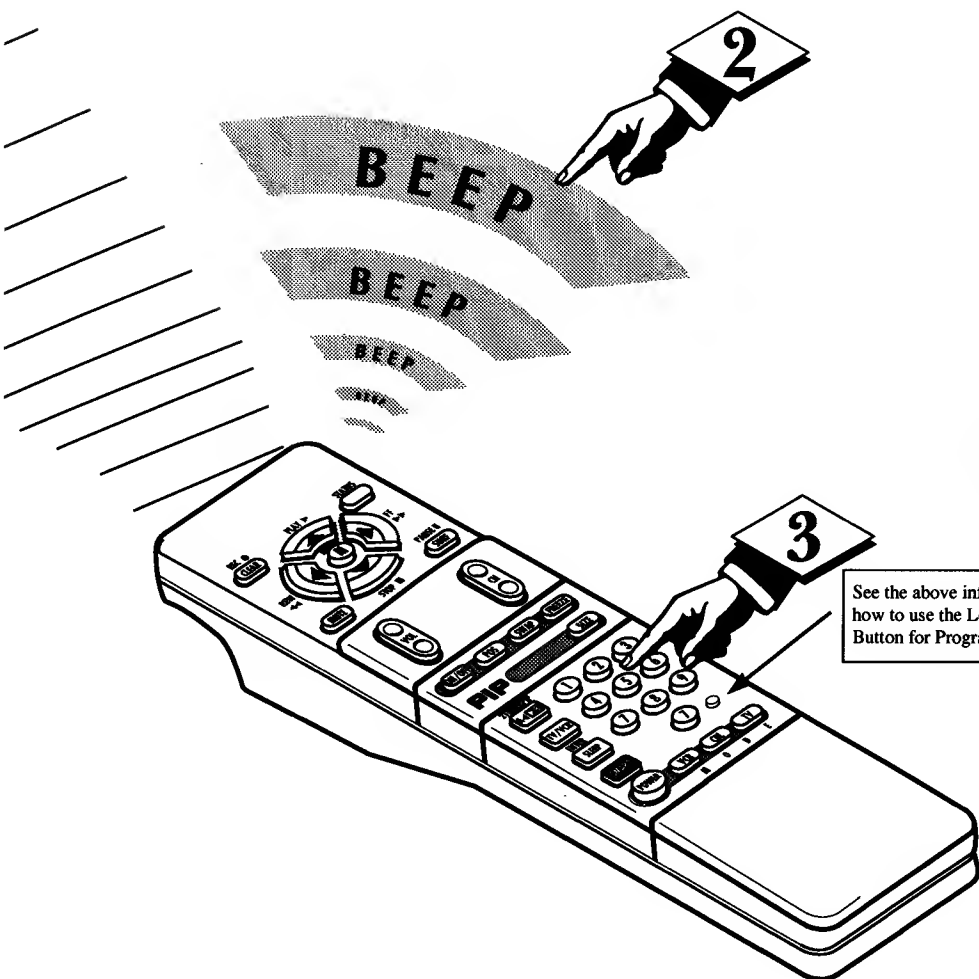

See the above information on how to use the Locator Code Button for Programming.

## SMART HELP



Remember, if batteries are replaced the Locator Code will need to be reentered.

When setting the Locator Code if any button, other than the number buttons, are pressed the remote will return to its normal operation mode.

\*For owners who live in an apartment (townhouse or condominium) complex, this task may be necessary since the remote locator's signal can be sent and detected directly through adjoining walls.

## REMOTE CONTROL OPERATION (CONTINUED)

 
 
### SMART PICTURE

*Regardless of what type of program your watching, your TV has automatic video control settings matched for your current program source or content. The Smart Picture feature quickly resets your TV's video controls for a number of different types of programs and viewing conditions you may have in your home.*

#### BEGIN

- 1 Press the **SMART** button on the remote.
- 2 Press the **MENU (M)** button to select the Smart Picture feature (highlighted in RED).
- 3 Press the **MENU ▲ or ▼** buttons to choose any of the preset viewing categories (Example: Cartoons, Movies, etc.). Then press the Menu (M) button to select the highlighted control.
- 4 Press the **STATUS** button on the remote to clear the screen.

STOP

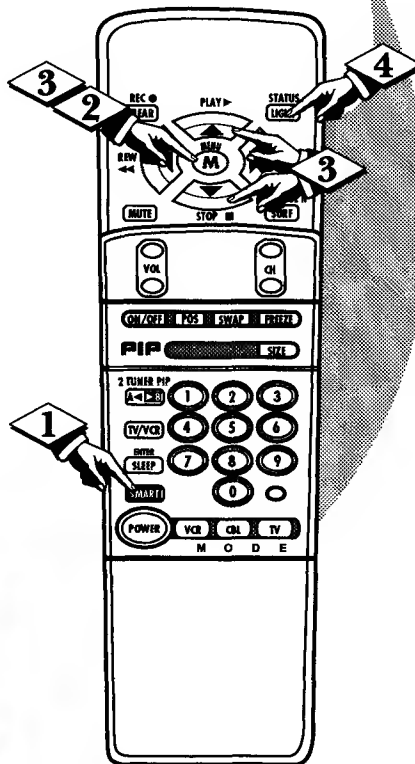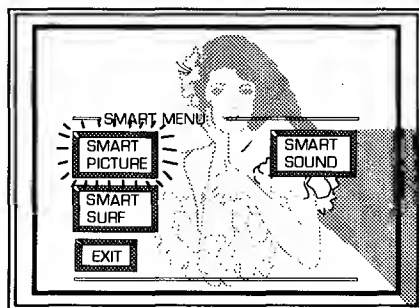

### SMART HELP



Remember, with Smart Picture "Custom" mode selected you can set a number of video controls to your own preference. Use the remote's Smart button to reselect these personally adjusted Custom settings contained within the Smart Picture feature. (See the next page for more detailed instructions.)

The video control settings for the Smart Picture categories (except CUSTOM) are memorized into the TV at the factory and can only be reset by field and service technicians.



## SMART PICTURE

To place "CUSTOM" Smart Picture settings into the TV's memory follow the steps below.

### (BEGIN)

- 1 Press the **SMART** button on the remote and then press **MENU (M)** to select the **SMART PICTURE** control.

List of "SMART PICTURE" categories shows on the TV screen.

 
 
 
 
 
- 2 Press the **MENU (M) ▲▼** buttons to highlight the "CUSTOM" Smart Picture category.

- 3 Press the **MENU (M)** button to select "CUSTOM".

- 4 Press the **MENU (M) ◀▶** buttons to move the **RED** highlight to the control you wish to adjust, then press the **Menu (M)**.

- 5 Press the **STATUS** button after you have finished your adjustments to clear the screen.

STOP

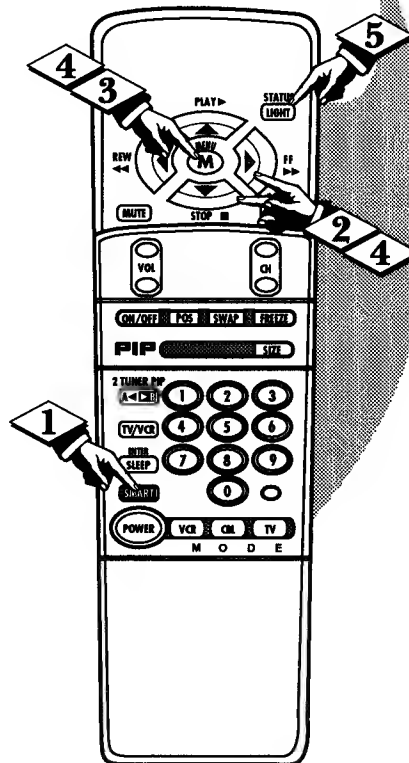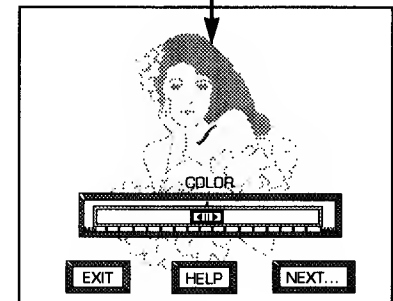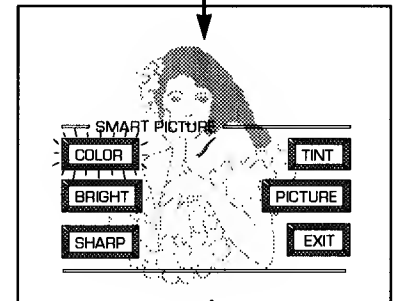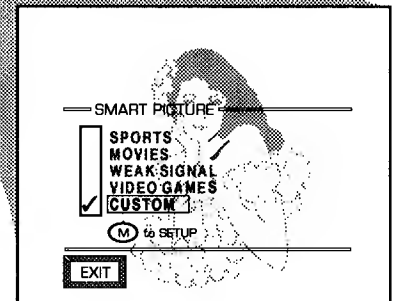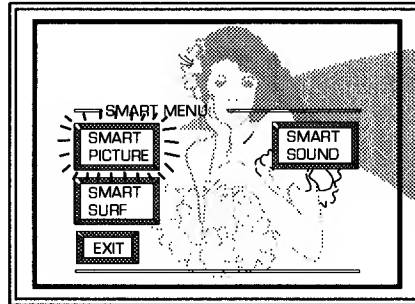



## REMOTE CONTROL OPERATION (CONTINUED)

 
 
 
### SMART SOUND

**A**re you tired of the sound of commercials following you into the next room or all through the house? Smart Sound allows you to preset a desired volume level that the TV sound will not go above. This makes for an even, more consistent sound by reducing the "peaks" and "valleys" that can occur during program changes or commercial breaks.

#### BEGIN

- 1 Press the **SMART** button on the remote.
- 2 With the **SMART Menu** on the screen, move the **RED** highlight with the **MENU** (◀▶) buttons. Then press the **MENU** (M) button to select the highlighted Smart Sound control.
- 3 Press the **MENU** ▲ or ▼ and then the **MENU** (M) button to turn the Smart Sound control **ON** (or **OFF**).
- 4 Press the **STATUS** button to clear the screen when completed.

STOP

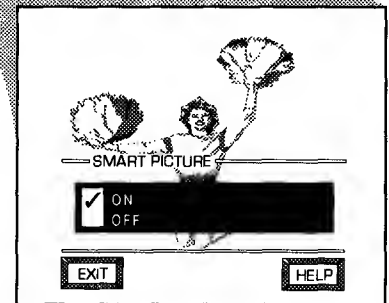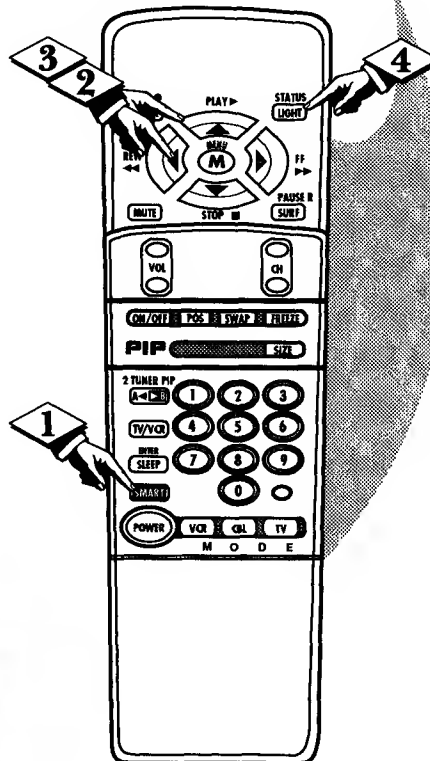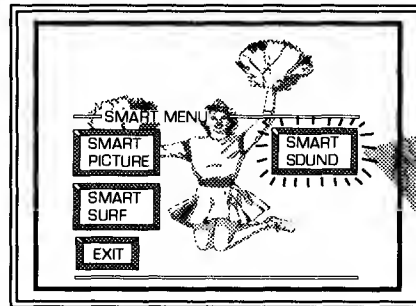

### SMART HELP



Remember, Smart Sound works for sound levels coming from either the Antenna/Cable input on the rear of the TV (RF audio); or the Auxiliary (AUX IN) audio inputs.

 
## 2-CHANNEL SURF/SMART SURF

A "list" or series of previously viewed channels can be selected with the SURF button on your remote control. With this feature you can easily switch between different TV programs that currently interest you. The Smart Surf control allows you to set up to 10 channels in its quick viewing "list".

### BEGIN

- 1 Press the Smart button on the remote.
- 2 With the SMART Menu on screen, move the RED highlight with the Menu (M) buttons. Press the MENU button to select the highlighted Smart Surf control.
- 3 Press the Menu ▲ or ▼, then the Menu (M) button to select either Smart Surf or 2-Channel Surf. (See explanation of Surf options with the illustration on this page.)
- 4 Press STATUS button on the remote control to clear the screen.

STOP

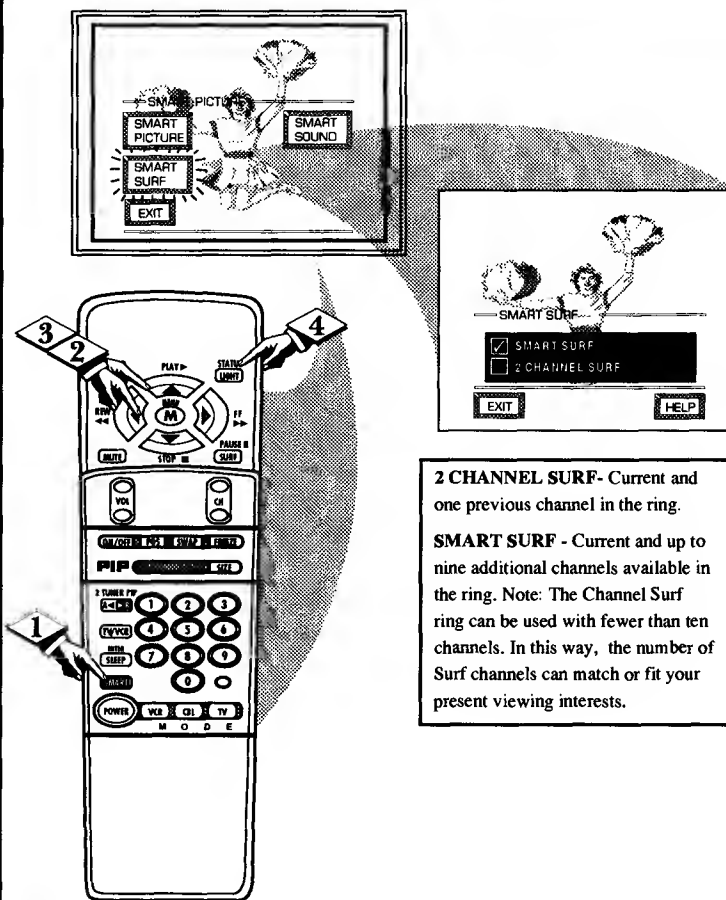

**2 CHANNEL SURF**- Current and one previous channel in the ring.

**SMART SURF** - Current and up to nine additional channels available in the ring. Note: The Channel Surf ring can be used with fewer than ten channels. In this way, the number of Surf channels can match or fit your present viewing interests.

## SMART HELP



**To Use 2-Channel Surf:**

With the 2-Channel Surf control ON, select the two desired channels for viewing with the number buttons on the remote control.

 
Press the SURF button on the remote to "toggle" between the two selected channels.

## HOW TO USE SMART SURF

### BEGIN

- 1 With the Smart Surf control ON (see above), select a desired channel for viewing. You can use the number buttons on the remote (or the Channel ▲▼ buttons).
- 2 Press the SURF button on the remote. (Some channel numbers may already appear within the Surf channel list.)
- 3 Press the Menu button to "ADD" the selected channel to the Surf list. Select the next desired channel and repeat steps 2 and 3. Continue until all desired channels are on the Surf list.
- 4 Press the SURF button on the remote to quickly review current action on channels contained within the Surf list.

STOP

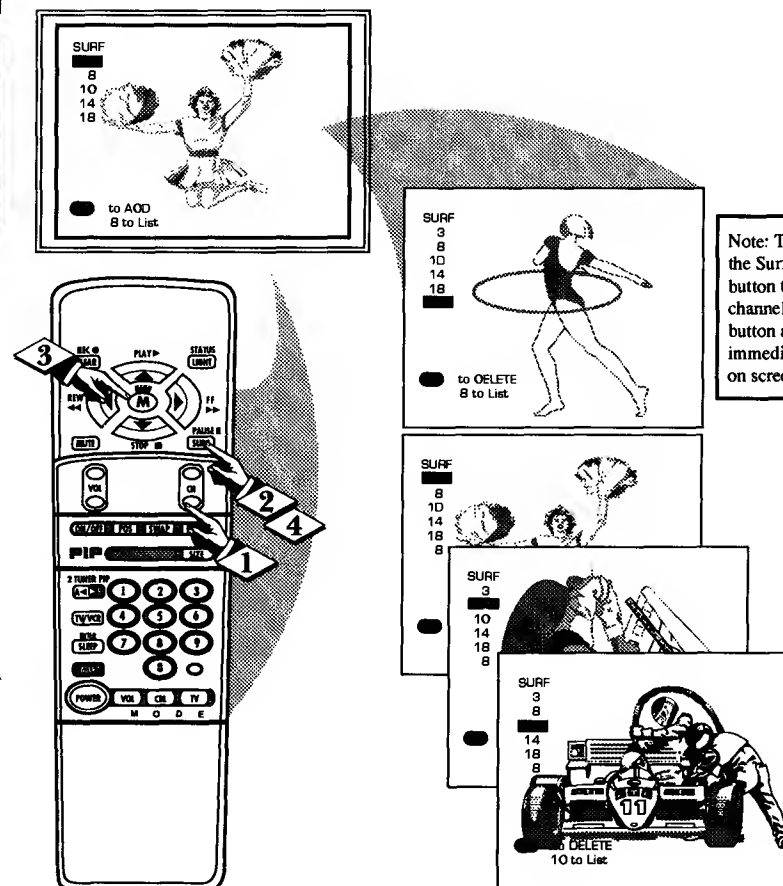

Note: To Delete a channel from the Surf list just press the SURF button to select the desired channel. Then press the Menu button and the channel will be immediately dropped from the on screen Surf list.




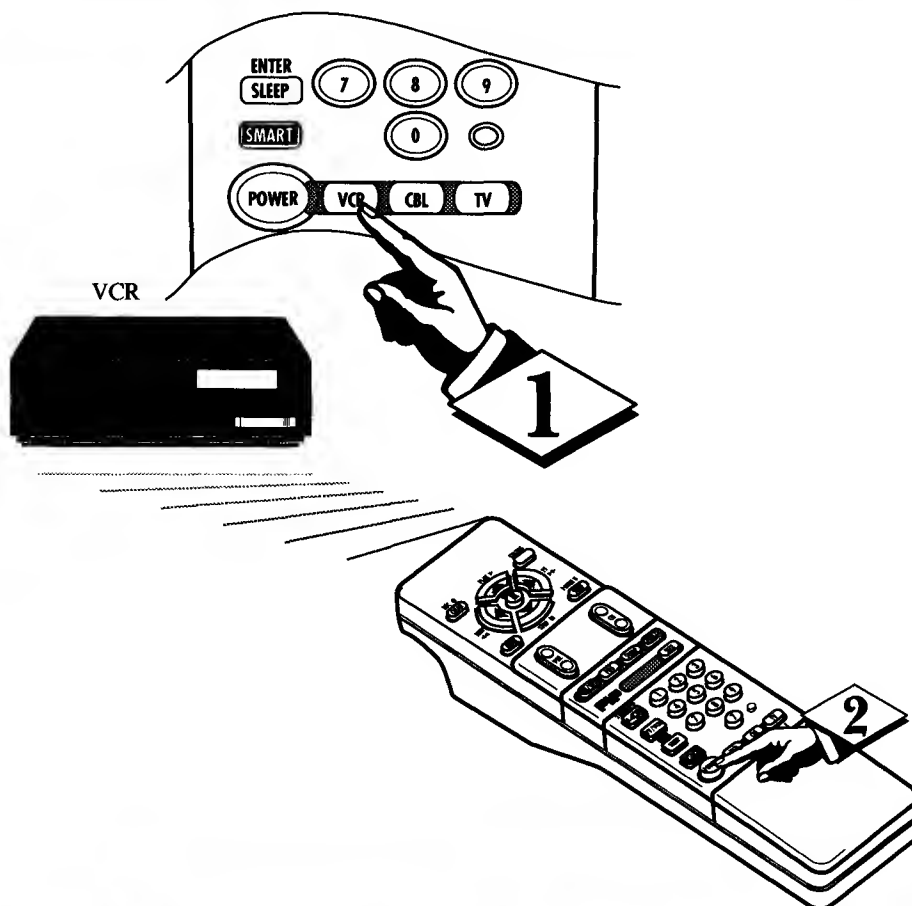 
## SETTING THE REMOTE TO WORK VCRs

**Y**our remote control is set to work your TV and many infrared remote (IR) control VCRs. However, an easy one-time step may be necessary before the remote will work your VCR.

Try this initial check to see if going on to the following section is necessary.

### BEGIN

- 1 Press the VCR System button on the remote.
- 2 Point remote toward VCR and press the POWER button.
- 3 Does the remote turn the VCR ON?  
IF YES,  and try the other VCR buttons on the remote. If they also work the VCR, then the remote is ready and no further steps are needed.  
If NO, continue...



- 1 First look up a **TWO-DIGIT remote code number** for your brand VCR before going through the simple "1,2,3" steps (on the following page).

*continue to next page*

### SMART HELP



Remember, if more than one number is listed, you may have to try more than the first two-digit code given in order to locate your VCR's remote code.

VCR BRAND	REMOTE CODE NO.	VCR BRAND	REMOTE CODE NO.
Akai	24, 25, 36	Panasonic	01, 02, 52
Capehart	33	Philips	00, 05
Conoid	13	Philips Video CD	37
Curtis Mathes	42	RCA	04, 32, 42, 43, 44
Daewoo	33	Samsung	22, 30
Emerson	20, 31, 34, 40	Sansui	49
Fisher	06, 07	Sanyo	13
Goldstar	23	Sears	08
Go Video	45, 46	Sharp	11, 12
Hitachi	03, 51	Shintom	35
JVC	14, 47, 48	Sony	09, 10, 41
Magnavox	00, 05	Teknika	26
Matsushita	01, 02	Toshiba	18, 19
Mitsubishi	16, 17, 38, 39, 50	Video Concepts	29
Multitech	27, 28	Zenith	15
NEC	21		





**N**ow that you have looked up the two-digit Remote Code Number for your brand of VCR (on previous page), you are ready to follow the four simple steps below.

*Please read through steps 1-4 before beginning.*

## **BEGIN**

- 1** Press and release the REC (RECORD) button.
- 2** Within **thirty seconds** after releasing the REC button, press and release the VCR System button.
- 3** Within **thirty seconds** after releasing the VCR System button, **ENTER THE TWO DIGIT CODE NUMBER** for the desired VCR. The remote is now ready to send commands to the VCR.
- 4** Point the remote at the VCR. Press the POWER button on the remote to turn the VCR ON.

**STOP**



## **SMART HELP**



Try it out. The Channel and VCR buttons on the remote should now operate the VCR.

Remember, if this doesn't work the first time, repeat steps using the same remote code number.

If after a second try the remote does not operate your VCR, and there are more code numbers listed for your brand VCR, use the next listed code number.

If after repeated attempts the code number method does not work your VCR, try the "VCR SEARCH" method on page 36.


 
 



# SETTING THE REMOTE TO WORK CABLE TV CONVERTERS

**Y**our remote control is set to work your TV and many infrared remote (IR) control Cable Converters. However, an easy one-time step may be necessary before the remote will work your Converter.

Try this initial check to see if going on to the following section is necessary.

## **BEGIN**

 - 1** Press the CBL System button on the remote.
- 2** Point remote toward Cable Converter and press the POWER button.
- 3** Does the remote turn the Converter ON?  
**IF YES,**  and try the CH   and CH number buttons on the remote. If they also work the Converter then the remote is ready and no further steps are needed.  
**IF NO,** continue...

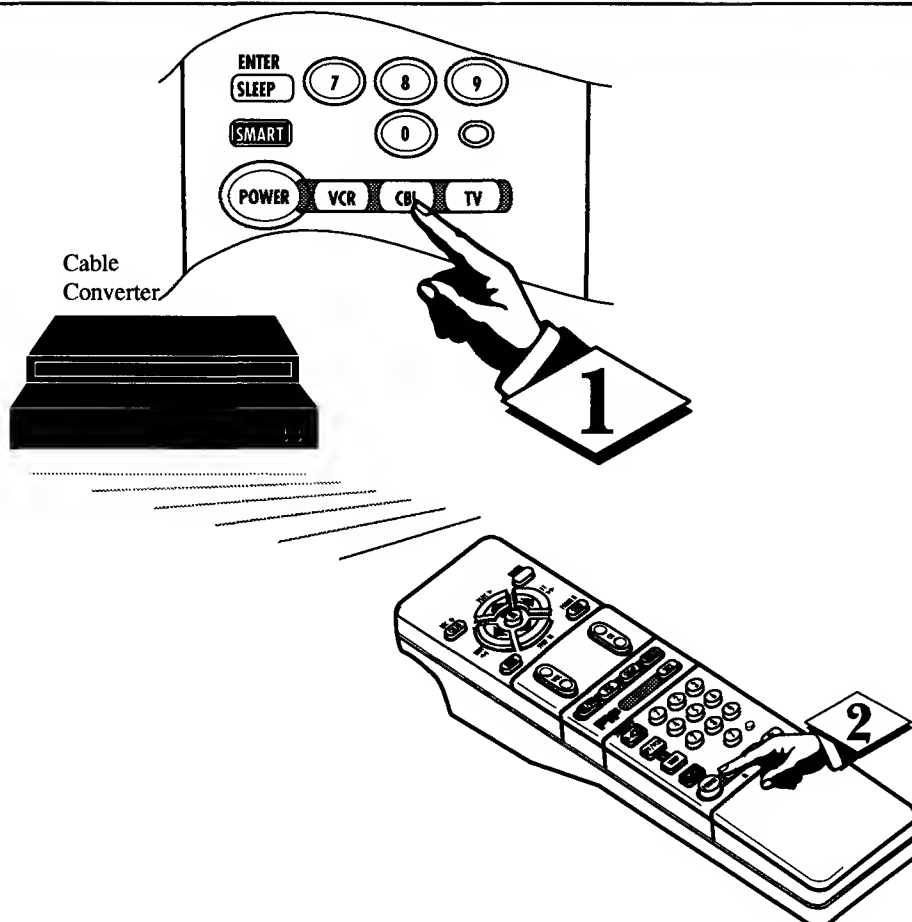

- 1** First look up a **TWO-DIGIT remote code number** for your brand Converter before going through the simple "1,2,3" steps (on the following page).

*continue to next page*

## **SMART HELP**



Remember, if more than one number is listed, you may have to try more than the first two-digit code given in order to locate your Converter's remote code.

<b>CONVERTER BRAND</b>	<b>REMOTE CODE NO.</b>	<b>CONVERTER BRAND</b>	<b>REMOTE CODE NO.</b>
Archer	28	Rembrandt	33
Diamond	23	Salora	52
Drake	37	Scientific Atlanta	08, 22, 47
Gemini	45	Sheritech	34
Hamlin	14, 15	Starcom	30
Hitachi	25	Sylvania	16
Jerrold	00,01,02,03,04,05,46,55	Texscan	48
Macom	29, 38	Tocom	12,13, 53
Magnavox	17, 31	Toshiba	43
NSC	49	Uniden Satellite	44
Oak	06, 27, 39	Unika	50
Panasonic	18, 35	United Satellite	54
Philips	19, 20, 21, 24, 26	Universal	36
Pioneer	09, 32	Video Tech	40
Regency	10, 11	Video Way	51
		Zenith	07, 41, 42



 
*Now that you have looked up the two-digit Remote Code Number for your brand of Cable Converter (on previous page), you are ready to follow the four simple steps below.*

*Please read through steps 1-4 before beginning.*

## BEGIN

- 1** Press and release the REC (RECORD) button.
- 2** Within thirty seconds after releasing the REC button, press and release the CBL System button.
- 3** Within thirty seconds after releasing the CBL System button, ENTER THE TWO DIGIT CODE NUMBER for the desired Converter. The remote is now ready to send commands to the Converter.
- 4** Point the remote at the Converter. Press the POWER button on the remote to turn the Converter ON.

STOP

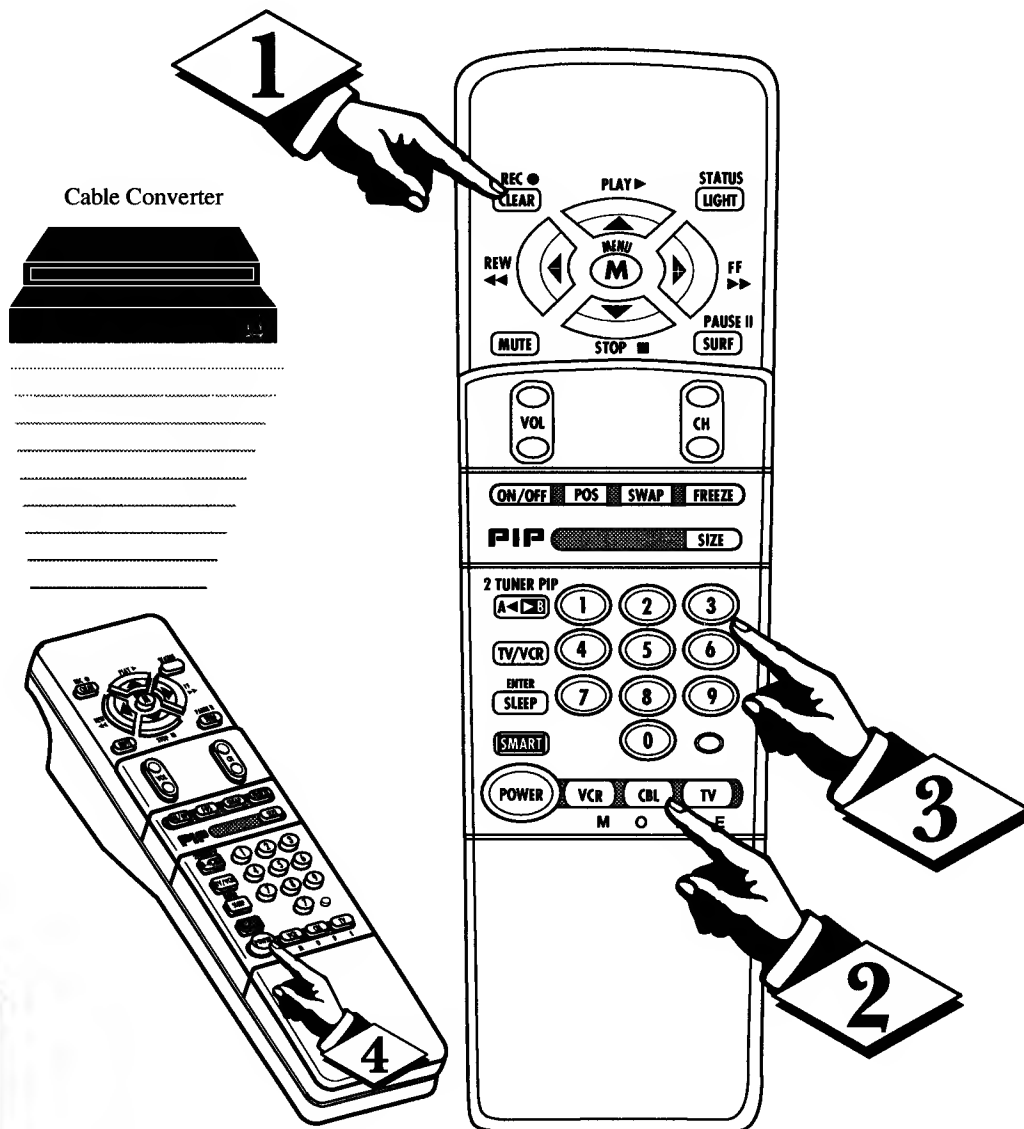

## SMART HELP



Try it out. The Channel and POWER buttons on the remote should now operate the Converter.

Remember, if this doesn't work the first time, repeat steps using the same remote code number.

If after a second try the remote does not operate your Converter, and there are more code numbers listed for your brand Converter, use the next listed code number.

If after repeated attempts the code number method does not work your Converter, try the "CONVERTER SEARCH" method on page 36.



# SETTING YOUR REMOTE TO WORK VCRs, CONVERTERS - SEARCH

**Y**our TV remote can be set to work your VCR or Cable Converter by what is called the **SEARCH** method.

If the "REMOTE CODE" number method shown in the previous section did not set your remote to work your VCR or Converter, then follow the easy steps listed below.

Please read through steps 1-4 before beginning.

## BEGIN

- 1 Press the **POWER** button on the VCR or Converter to turn the unit ON.
- 2 Stand at least six feet away from the front of the VCR or Converter.  
Point the remote toward the unit. **HOLD DOWN** the **SURF** and the desired **System (VCR or CBL-Converter)** buttons at the same time. **KEEP HOLDING** **BUTTONS DOWN**.
- 3 Watch the **Channel Indicator** on the unit.  
Channel Numbers will **SCAN UP** when the unit has been identified. This may take up to two minutes.
- 4 Release the **SURF** and **System (VCR or CBL)** buttons as soon as channel numbers start to scan up. The code has been identified and the remote is ready to operate with the VCR or Converter.

STOP

 
## SMART HELP



Remember, a minute or two can seem very long, but the code should be located within two minutes.

Don't let the VCR or Converter scan up more than five channels. The remote may pass up the right code and another two minute search cycle will have to be repeated.

If no channel change happens within two minutes, repeat steps 1-4. Should a channel change still not occur, the remote will not work with the desired unit.

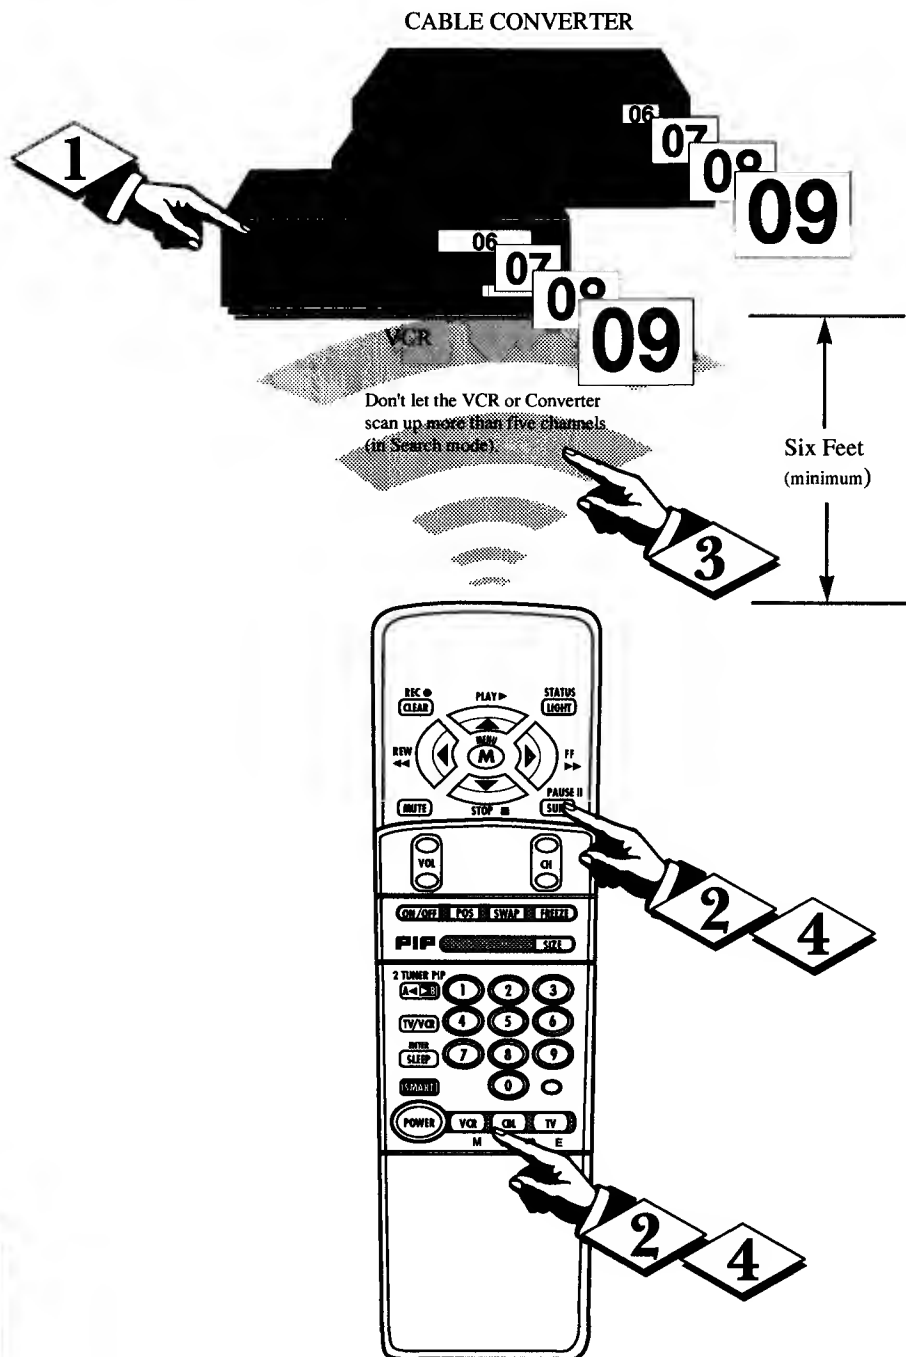

# USING THE REMOTE'S VCR BUTTONS



**W**hen using the TV remote with a VCR, first make certain it is set to control your VCR ( by the REMOTE CODE or SEARCH method - see earlier section).

## **BEGIN**

- 1 Press the VCR System button on the remote.
- 2 Point the top of the remote toward the front of the VCR (remote sensor window) when pressing buttons.

**STOP**

## **Record Button**

Hold the RECORD button down, and then press the PLAY button to begin a VCR recording. Press to Clear or erase an incorrect VCR button entry (i.e. Timer Program).

## **Rewind Button**

 
Press to rewind tapes. For some VCRs you may need to press STOP button first then REWIND. In playback mode, hold button down to view picture moving rapidly in reverse.

## **Pause Button**

Press to temporarily stop the tape during a playback, or recording. Press again to release Pause.

## **TV-VCR Button**

Press to the VCR position ("VCR" indicator on the VCR will light) to view the playback of a tape. Press again to place in the TV position ("VCR" indicator on the VCR will go OFF) to view one program while recording another program. When used with the TV the TV/VCR button works as a source button. Each press cycles the TV between channels 3 and 4; the last view channel; and the AUX or S-VIDEO Input mode. It is a quick one-button way to select these channels and modes (without directly entering the TV's Menu system.)

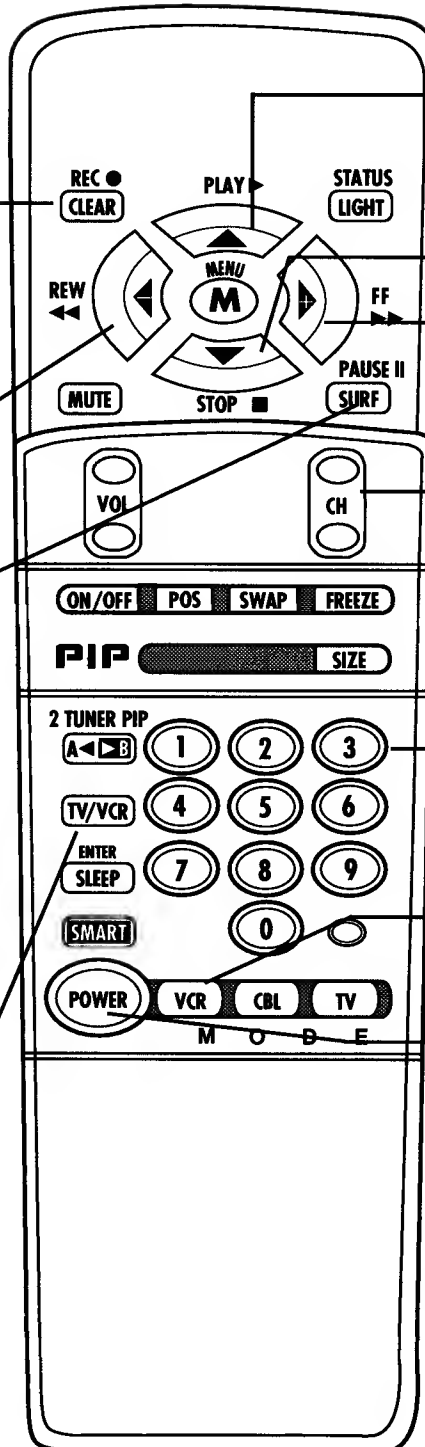

## **Play Button**

Press to playback a tape. Hold down after pressing the RECORD button to start a recording.

## **Stop Button**

Press to stop the tape.

## **Fast Forward Button**

Press to rapidly advance the tape. For some VCRs you may need to press STOP first then FF. In Playback mode hold button down to view the picture moving rapidly in the forward direction.

## **Channel Scan Buttons**

Press to scan up or down through VCR channel numbers.

## **Number Buttons**

Press buttons for direct VCR channel selections.

## **VCR System Button**

Press to send remote commands to the VCR.

## **Power Button**

Press to turn the VCR ON and OFF.

## **SMART HELP**



 
Remember, the VCR buttons on the remote will not operate your VCR if those features are not already found on your VCR remote control.

Note: All VCR functions (particularly Search, Rewind, Fast Forward, etc.) will operate the same as with the original VCR remote control provided with the VCR.

*See the following steps on how channels connected to the ANT(enna) B Input can be shown and used within the PIP window:*

*continue to next page*

**If you need any accessories or parts to complete the described PIP connections, contact your dealer, or our Parts Information Center at (1-800-292-6066), for details.**



Now that you have completed the required connections on the previous page you are ready to follow the simple steps shown below.

### 3 Turn the TV ON.

Place the TV's PIP SOURCE SELECT control to "ANT B" -

- With FEATURES MENU (4 of 5) on screen, move the RED highlight with the MENU (M) buttons. Then press the MENU button.

- Press the MENU ▲▼ and MENU (M) buttons to highlight and select the ANT B" (✓) item.

Also place the TV's Main screen PICTURE SOURCE SELECT control to "ANT A" -

- See the Picture Source option FEATURES MENU (1 of 5).

 
Press the STATUS button to clear the screen when the above Menu items have been set.

### 4 Press the PIP ON/OFF button on the remote.


The PIP window should show in one of the corners of the TV screen.

### 5 Press the SWAP (or A◀▶B) buttons on the remote to move the ANT B and ANT A Input pictures between the PIP window and Main screen.

Use the Channel Number or CH ▲▼ buttons to select desired programs for viewing. Program Sound occurs with the channels displayed on the Main screen

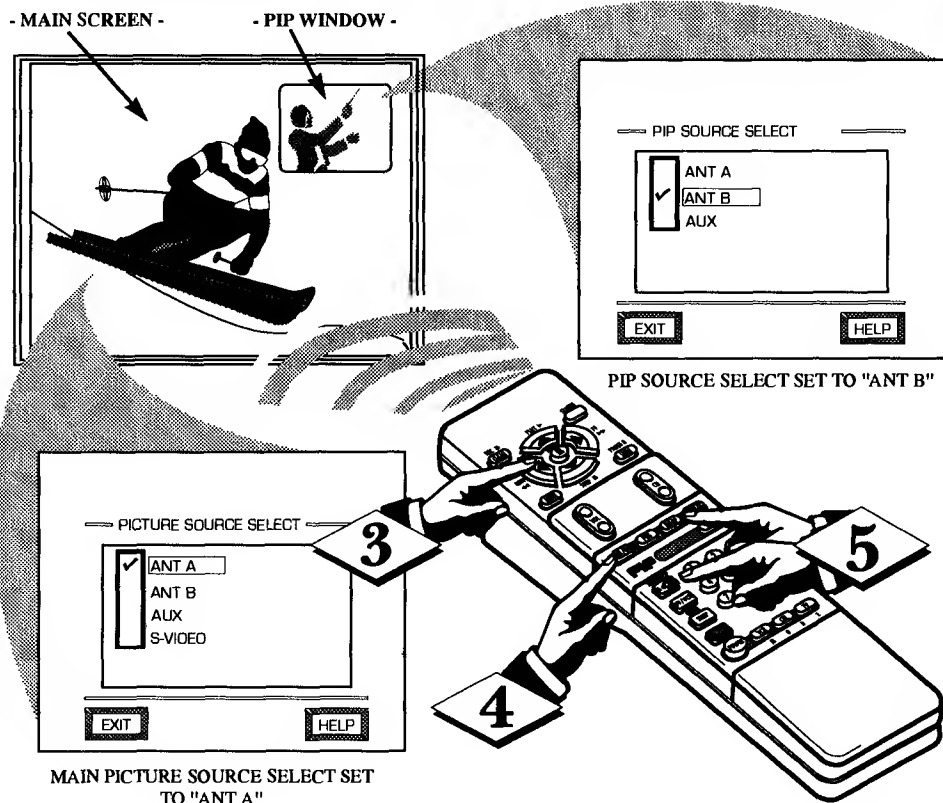


 BLACK frame around the PIP window appears when the ANT A Input is on the Main screen.

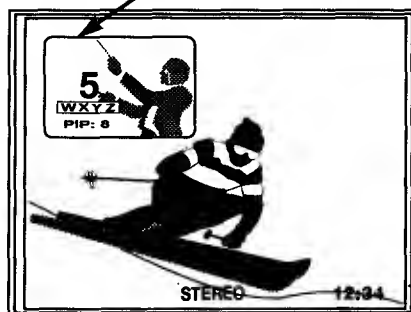

- Main Screen is CH 5 from ANT A input.
- PIP is CH 8 from ANT B input

 WHITE frame around the PIP window appears when the ANT B Input is on the Main screen.

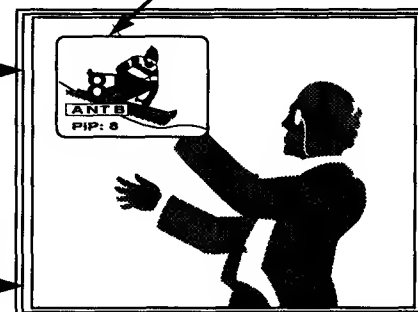

- Main Screen shows CH 8 from ANT B input.
- PIP is CH 5 from ANT A input.

### SMART HELP



Remember, if you see the same picture on the main screen and in the PIP window, check to be sure the TV's PIP Source Select and Main screen Picture Source select are set for ANT B and ANT A respectively.

See the following page on how to operate other PIP features with the TV's remote control.

**B**y using the PIP buttons on the remote the PIP picture can be moved and swapped with the main screen. The main screen picture can also be frozen in the PIP window.

## BEGIN

- 1 Press the **PIP ON/OFF** button to show the PIP picture.

PIP appears in a corner of TV screen. Press PIP ON/OFF again to remove PIP from the main screen.

- 2 Press the **PIP POSITION** button to move the PIP picture (from corner-to-corner on the TV screen.)

This feature allows you to move PIP and avoid blocking off any main screen action.

- 3 With PIP on the TV screen, press the **SWAP** button to swap the main screen picture with the PIP picture. See "Smart Help" note on this page.

- 4 Press **FREEZE** to hold the current MAIN screen picture in the PIP window (Main picture is still active).

If PIP is currently OFF, the PIP window will automatically appear.

Press FRZ repeatedly to update the frozen PIP with current pictures from the Main screen.

You cannot reposition a frozen PIP picture.

 
Press the PIP ON/OFF button to drop the frozen PIP picture from the screen.

- 5 Press the **PIP SIZE** button to change the size of the PIP window shown on the TV screen.

Press the PIP SIZE button again to see and compare the large and small size PIP windows.

You cannot change the size of a frozen PIP picture.

STOP

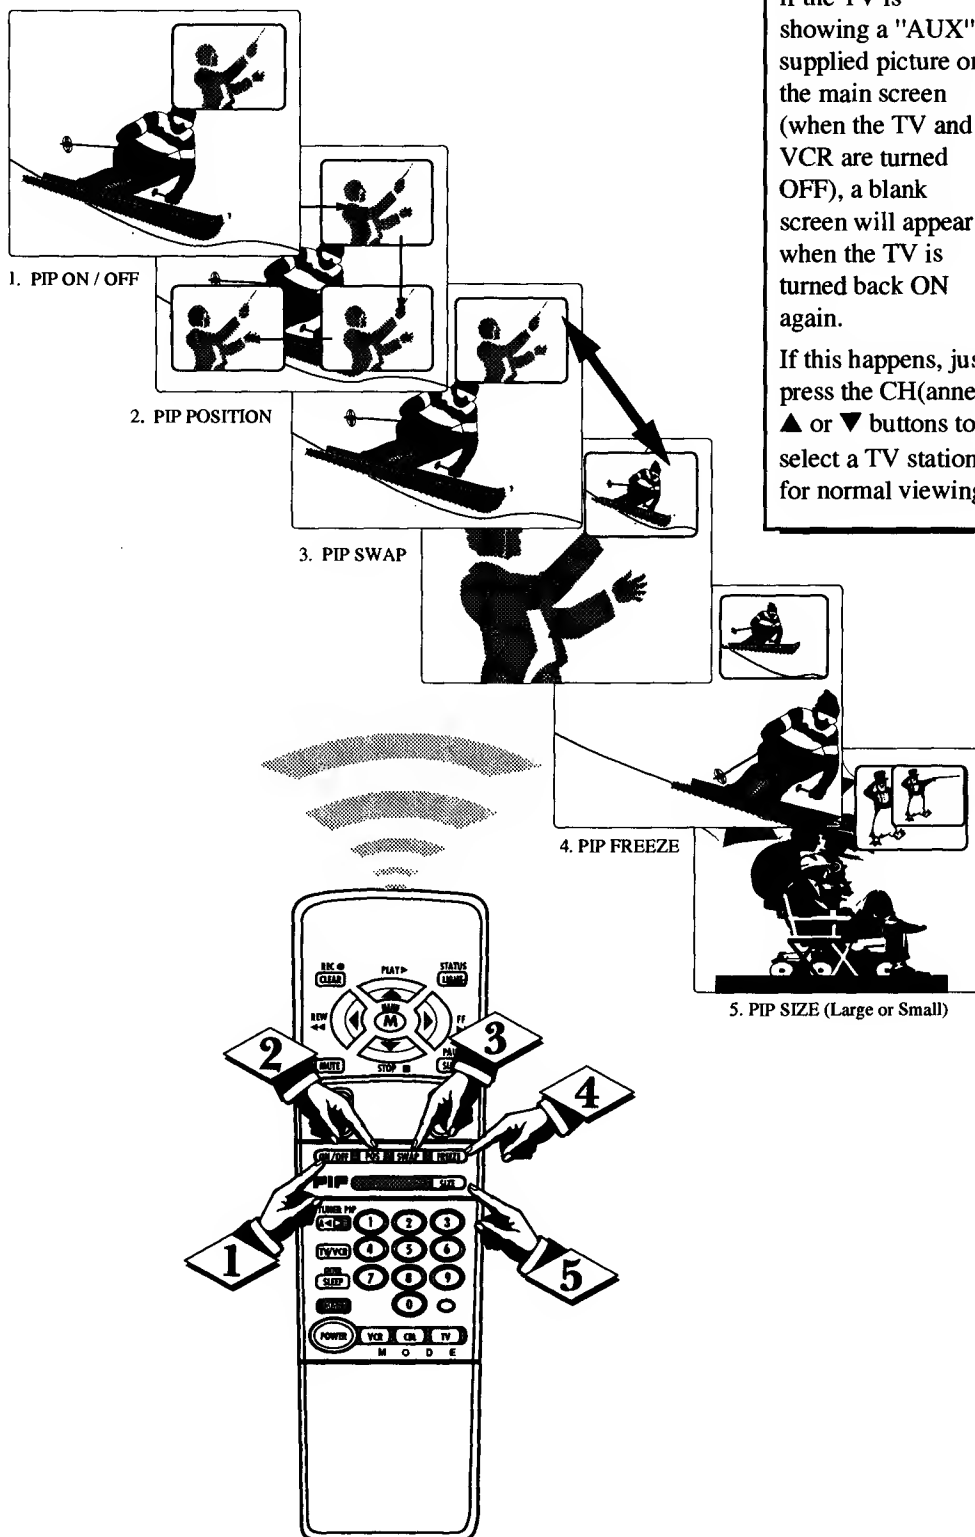

## SMART HELP



Remember, if the TV is showing a "AUX" supplied picture on the main screen (when the TV and VCR are turned OFF), a blank screen will appear when the TV is turned back ON again.

If this happens, just press the CH(annel) ▲ or ▼ buttons to select a TV station for normal viewing.



## PIP SOURCE

The picture for the PIP window can come through either the ANT/CABLE or VCR/AUX Inputs (on the rear of the TV). PIP Picture Source simply tells the TV which one of these sources it is to show in the PIP window.


### BEGIN

#### 1 Select PIP SOURCE control.

With FEATURES MENU (4 of 5) on screen, move the RED highlight with the MENU (M) and the right arrow buttons. Then press the MENU button.

#### 2 Press the MENU ▲▼ and MENU (M) buttons to highlight and select the desired PIP picture Source (✓).

 
 
 
 
 
 
ANT A or B- for a picture signal coming from either the ANT(enna) A or B Input plug on the TV.

Note: The remote control's  button can also be used to quickly swap between the picture sources for the TV's Main screen and the PIP window.

AUX- for a picture signal coming from the AUX IN Audio and Video jack on the TV.

#### 3 Press the STATUS button to clear the screen.

STOP

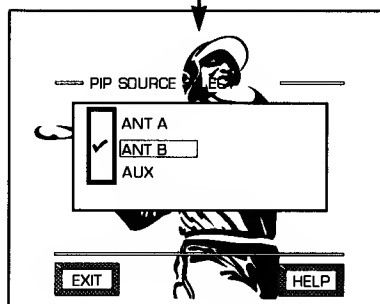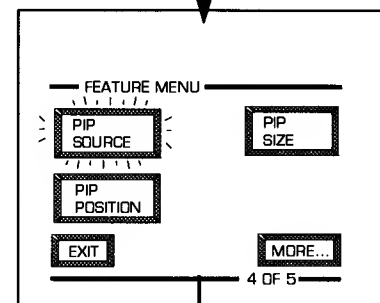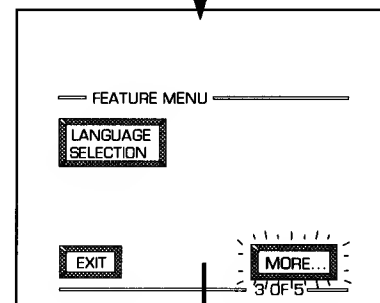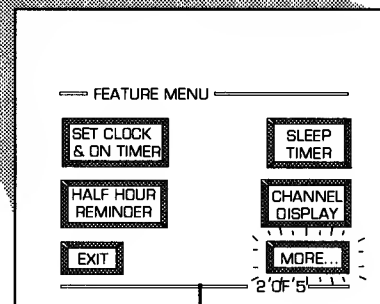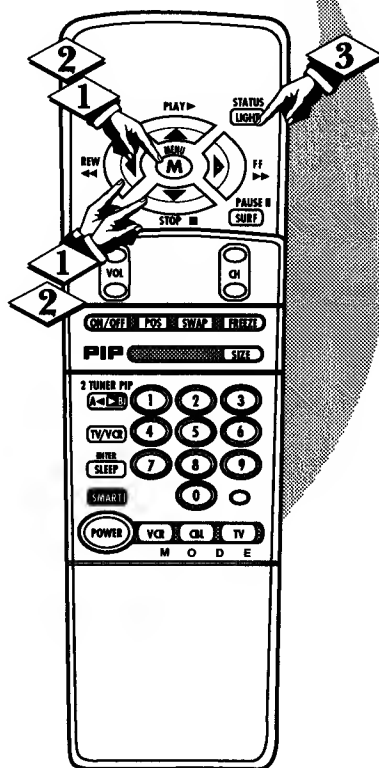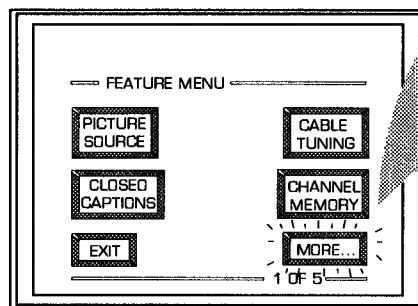

## PIP COLOR / PIP TINT

**The Picture-In-Picture (PIP) Color and Tint controls are used to make fine tune adjustments to the color settings for PIP (when it is shown on the TV screen).**

### BEGIN

- 1 Select PIP COLOR (or PIP TINT) control.

With PICTURE MENU (5 of 5) on screen, move the RED highlight with the MENU (M) buttons. Then press the MENU button.

- 2 Press the MENU ▲▼ buttons to move the RED highlight. Press the MENU button to turn (✓) the PIP COLOR or TINT control ON.

The PIP automatically comes on to show the PIP window on the TV screen.

 
 
 
 
 
 
 
- 3 Press the (+) and (-) buttons to adjust the PIP for Color (or Tint) levels you prefer.

- 4 Press the STATUS button to clear the screen.

STOP

### SMART HELP

Remember. Although there are separate COLOR and TINT controls for PIP, the adjustment levels for these controls depend on the TV's main picture. For example: If the main screen is showing a black and white picture, PIP would also be in black and white (even though its source is in color).

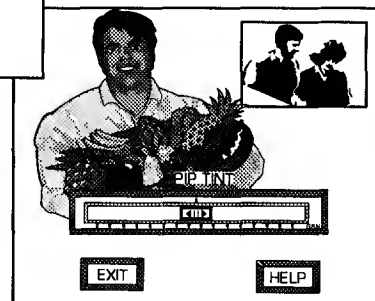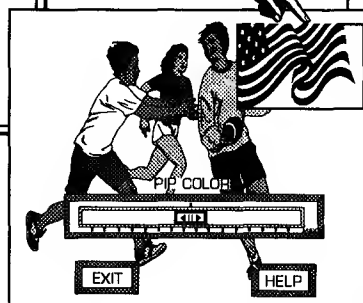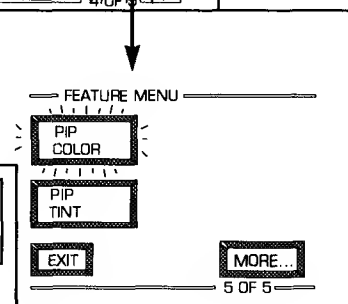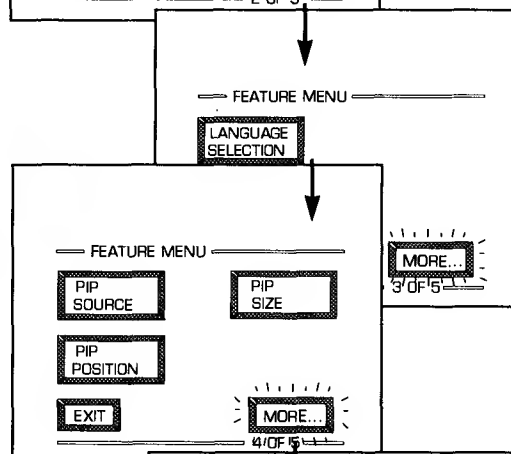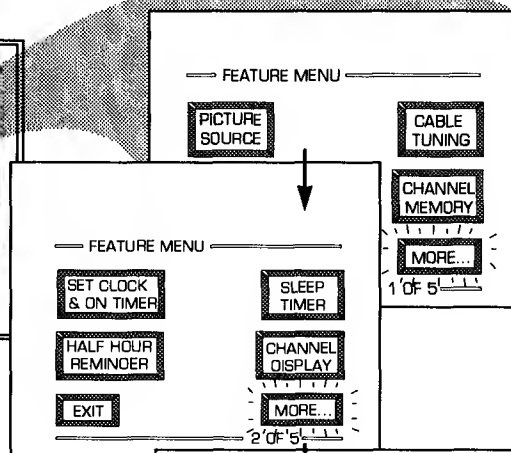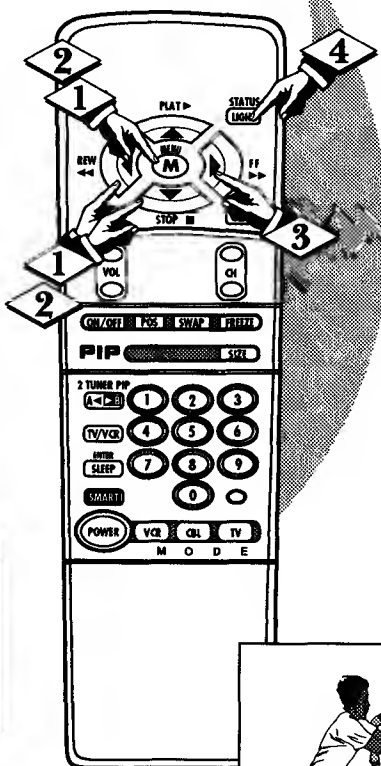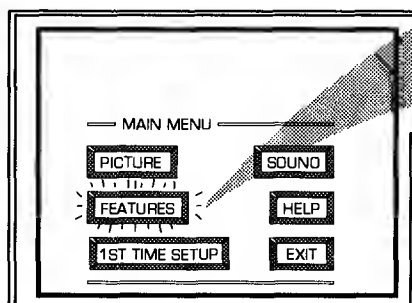

## MORE PIP CONNECTIONS

 
### PIP hookup with Cable Converter Box and VCR.

#### (BEGIN)

- 1 First use an optional signal splitter and connect the original cable TV signal to both the CABLE IN on the Cable Converter and the ANTENNA plug on the rear of the TV.
- 2 Connect the CABLE OUT on the Converter to the ANT. IN on the VCR.
- 3 Connect the VIDEO OUT jack on the VCR to the VIDEO IN jack on the TV.

Also connect the AUDIO OUT (R and L) jacks from the VCR to the AUDIO IN jacks on the TV.

STOP

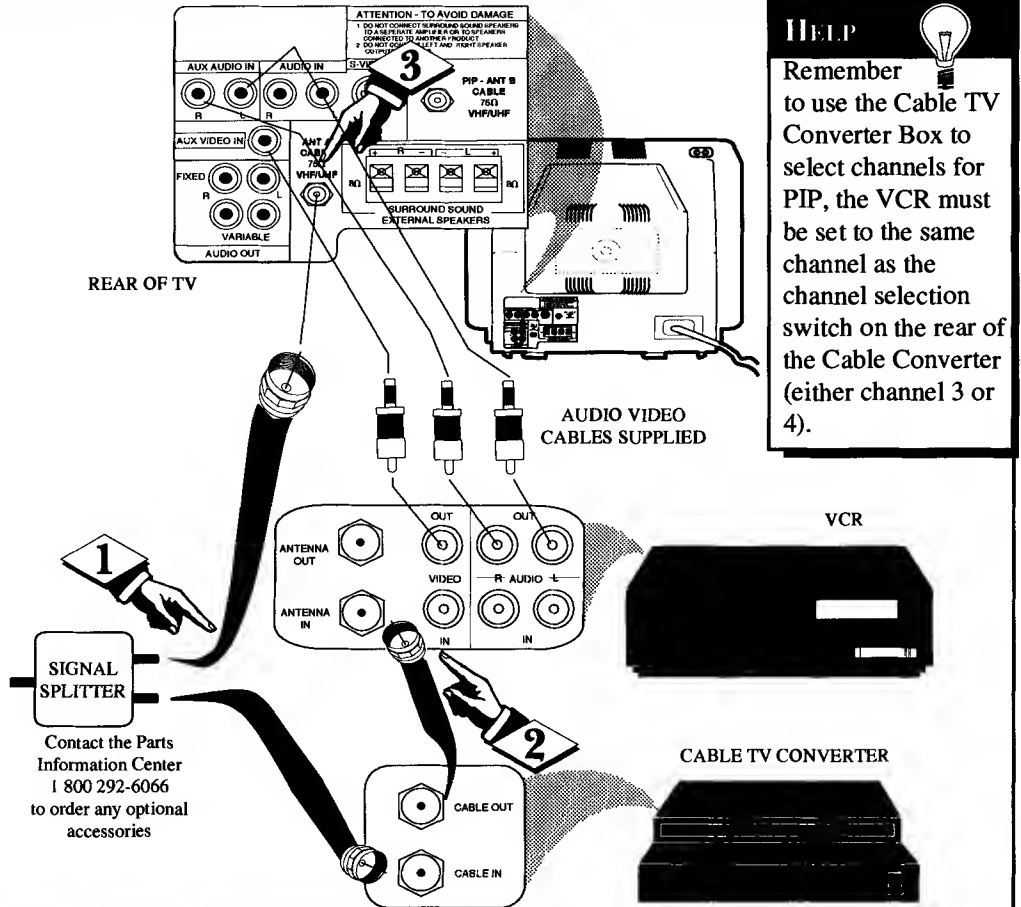

#### SMART HELP



Remember to use the Cable TV Converter Box to select channels for PIP, the VCR must be set to the same channel as the channel selection switch on the rear of the Cable Converter (either channel 3 or 4).

 
## TV HELP MENU

The on screen *HELP* menu offers both *Operating Tips* and a list of *Glossary* definitions for different features on your TV. These items are given to provide you with more information and details on a select group of feature operations.

#### (BEGIN)

- 1 Select "HELP" on the TV's Main Menu.  
Press the remote's Menu buttons to move UP/DOWN and from SIDE-TO-SIDE within the list of on-screen features.  
Press MENU (M) to select the highlighted "HELP" item.
- 2 Press the MENU and then the MENU (M) buttons to select either the OPERATING TIPS or GLOSSARY item.

STOP

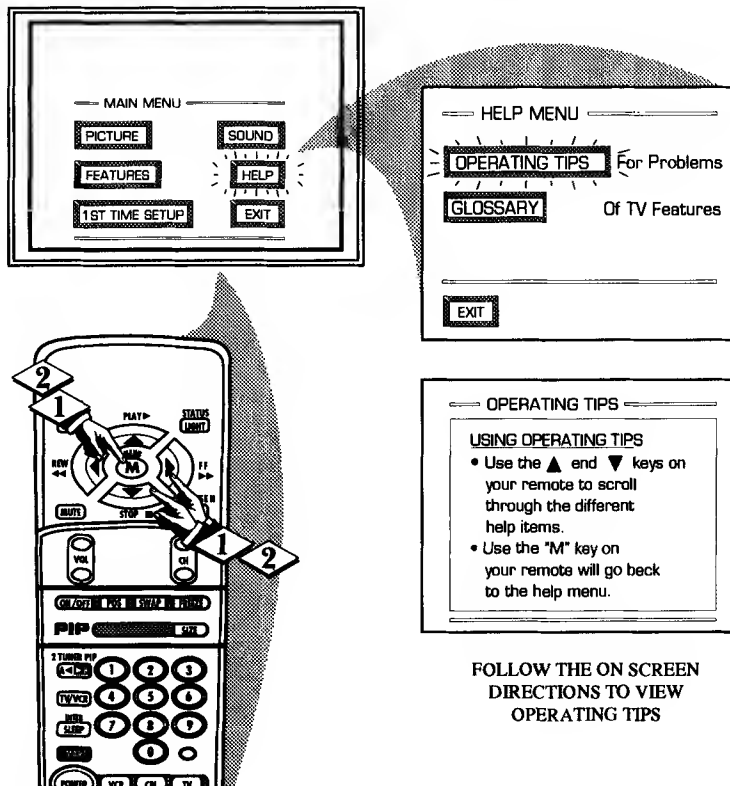

## TIPS IF SOMETHING ISN'T WORKING

*Please make these simple checks before calling for service. These tips can save you time and money since charges for TV installation and adjustment of customer controls are not covered under your warranty.*

### **No Power**

- Check the TV power cord. Unplug the TV, wait 1 minute, then reinsert plug into outlet and push POWER button again.
- Check to be sure outlet is not on a wall switch.

### **No Picture**

- Check antenna connections on the rear of the TV. Are they properly secured to the antenna plug on the TV?
- Check the CABLE TUNING control for correct position.
- Check PICTURE SOURCE control for correct position AUX, or S-VIDEO position without a signal source will result in a blank screen.
- Check the CLOSED CAPTIONS control. Some TEXT modes could block the screen.

### **No Sound**

- Check the VOLUME and MUTE buttons on the TV and remote.
- Check the TV SPEAKER NORMAL/OFF control for the correct position.
- If attempting auxiliary equipment hook-ups, check audio jack connections and that the auxiliary equipment is on and in the proper operating modes.

### **Remote Does Not Work**

- Check TV-VCR-CBL "System" buttons on the remote. Press the remote's TV System button to send commands to the TV; VCR System to sent to VCR; etc.
- Check batteries. Replace with AA Heavy Duty (Zinc Chloride) or Alkaline batteries if necessary.
- Clean the remote and the remote sensor window on the TV.

### **TV Displays Wrong Channel or No Channels Above 13**

- Repeat channel selection.
- Add desired channel numbers (ADD/DELETE CHANNELS control) into TV memory.
- Check CABLE TUNING control for correct position.

This TV is equipped with protective circuitry that shuts the TV off in case of moderate power surges. Should this occur turn the TV back on by pressing the POWER button once or twice, or unplug and then replug the power cord at the AC outlet. This feature is NOT designed to prevent damage due to high power surges such as those caused by lightning, which is not covered by your warranty.

### **Cleaning and Care**

- To avoid possible shock hazard be sure the TV is unplugged from the electrical outlet before cleaning.
- When cleaning the TV screen take care not to scratch or damage the screen surface (avoid wearing jewelry or using anything abrasive- do not use household cleaners). Wipe the front screen with a clean cloth dampened with water. Use even, easy, vertical strokes when cleaning.
- Gently wipe the cabinet surfaces with a clean cloth or sponge dampened in a solution of cool clear water and a mild soap or detergent. Use a clean dry cloth to dry the wiped surfaces.
- Occasionally vacuum the ventilation holes or slots in the cabinet back.
- Never use thinners, insecticide sprays, or other chemicals on or near the cabinet, as they might cause permanent marring of the cabinet finish.



**A/V Inputs** \* Connector plugs which allow the introduction of distinct audio and video signals into the TV from accessory VCRs, camcorders, etc. These plugs bypass the normal tuner or RF/Antenna signal circuitry.

**Coaxial Cable** \* A single solid antenna wire normally matched with a metal plug (F-type) end connector that screws (or pushes) directly onto a 75 Ohm input found on the Television or VCR.

**Display** \* An on screen message or graphics that help the user operate and adjust his Television feature controls. See On Screen Displays (OSD).

**Direct Audio/Video Inputs** \* Located on the rear of the TV these connectors (RCA phono type plug) are used for the input of audio and video signals. Designed for use with VCRs (or other accessories) in order to receive higher picture resolution and offer sound connection options.

**Identify** \* Method by which a remote control searches and finds an operating code for another product (such as a VCR or Cable Converter). Once the code has been "identified" then the TV remote can operate and send commands to the other product.

**Multichannel Television Sound (MTS)** \* The broadcast standard that allows for stereo sound to be transmitted with the TV picture.

**On Screen Displays (OSD)** \* Refers to the wording or messages generated by the television (or VCR) to help the user with specific feature controls (color adjustment, programming, etc.).

**Menu** \* An on-screen listing of feature controls shown on the Television screen that are made available for user adjustments.

**Picture -In-Picture (PIP)** \* Term used when two pictures are shown on the TV screen at the same time. The smaller PIP picture is supplied by a VCR (or other tuner/video playback source). The PIP picture can also be moved and swapped with the TV's main screen picture.

**Programming** \* The procedure of adding or deleting channel numbers into the Television's memory circuits. In this way the Television "remembers" only the locally available or desired channel numbers and skips over any unwanted channel numbers.

**Remote Sensor Window** \* A window or opening found on the Television control panel through which infrared remote control command signals are received.

**Second Audio Program (SAP)** \* Another or additional audio channel provided for in the Multichannel Television Sound (MTS) broadcast standard. The most frequently proposed use for SAP is the simultaneous bilingual broadcast of TV program material.

**Status** \* Allows the user to quickly confirm what channel number is currently being viewed. Status can also be used to clear the Television of on screen displays or information (rather than waiting for the displays to "time out" or automatically disappear from the screen).

**S-Video Input** \* Allows direct connection of high-resolution video sources, such as a Super VHS videocassette recorder, Laser Disc player, etc. Provides optimum picture resolution, sharpness, and clarity.

**Twin Lead Wire** \* The more commonly used name for the two strand 300 Ohm antenna wire used with many indoor and outdoor antenna systems. In many cases this type of antenna wire requires an additional adapter (or balun) in order to connect to the 75 Ohm Input terminals designed into the more recent Televisions and VCRs.

**Variable Audio Output** \* TAn adjustable audio output which allows for volume variations at the source.

 
## INDEX

Accessories/Optional.....	7, 22-25, 38, 43, *Q/U-1
Adapter Connector.....	38, 43, *Q/U-1
Add/Delete Channels.....	10, 11, *Q/U-2
Advance Buttons.....	*Q/U-2, 4
Audio Controls.....	18-23
Audio/Video Input.....	24-25, 38, 43 *Q/U-2
Automatic Programming.....	10, *Q/U-2
Battery Installation.....	*Q/U-3
Cable TV Connections/Settings.....	9, 24-25, 38, 43, *Q/U-1, 2
Channel/Time Display.....	12, 15, *Q/U-3
Channel Memory.....	10, 11, *Q/U-2
Channel/Time Reminder.....	16
Clock Setting.....	12
Clock Timer.....	13
Closed Captioning.....	8
Color Controls.....	6, *Q/U-4
Controls/TV.....	*Q/U-2, 3, 4
Controls/Remote.....	26-37, 40, *Q/U-2, 3, 4
Exit.....	*Q/U-4
Features.....	5
First Time Set Up.....	*Q/U-2
Glossary/TV Terms.....	45
Help Menu.....	43, *Q/U-2, 4
Inputs/Audio and Video.....	24-25, 38, 43
Language Control.....	17
Magnavue.....	6
Menu.....	*Q/U-2, 4
Minus(-)/Plus (+) Buttons.....	*Q/U-3, 4
Picture-In-Picture (PIP).....	38-43, *Q/U-2

Picture Source.....	7
Power Light Indicator.....	*Q/U-3
Precautions/Safety.....	2, 44, *Q/U-1
Programming Channels.....	10, 11, *Q/U-2
Remote Control.....	26-37, 40, *Q/U-2, 3, 4
Remote with VCRs.....	32-33, 36, 37
Requesting Service.....	44, 46-47, 48
RF Coaxial Cable.....	38, 43, *Q/U-1
Reminder/Time and Channel.....	16
Safety/Precautions.....	2, 44, *Q/U-1
Second Audio Program (SAP).....	19
Sensor Remote.....	*Q/U-3
Sleep Timer.....	14
Smart Picture.....	28-29
Smart Sound.....	30
Smart Surf/Surf Control.....	31
Sound Adjustments.....	18-21
Status Button.....	*Q/U-3, 4
Surround Sound.....	23
Speaker ON/OFF Control.....	22
Time/Channel Display.....	15, 16, *Q/U-3
Timer (Turn On).....	13
VCR Button.....	37
VCR/TV Connections.....	24-25, 38, 43, *Q/U-1
Tips for Service.....	44, 46-47
TV Speaker Control.....	22
Volume Display.....	21
Warranty.....	48

# Philips Consumer Electronics Company

## Factory Service Center Locations

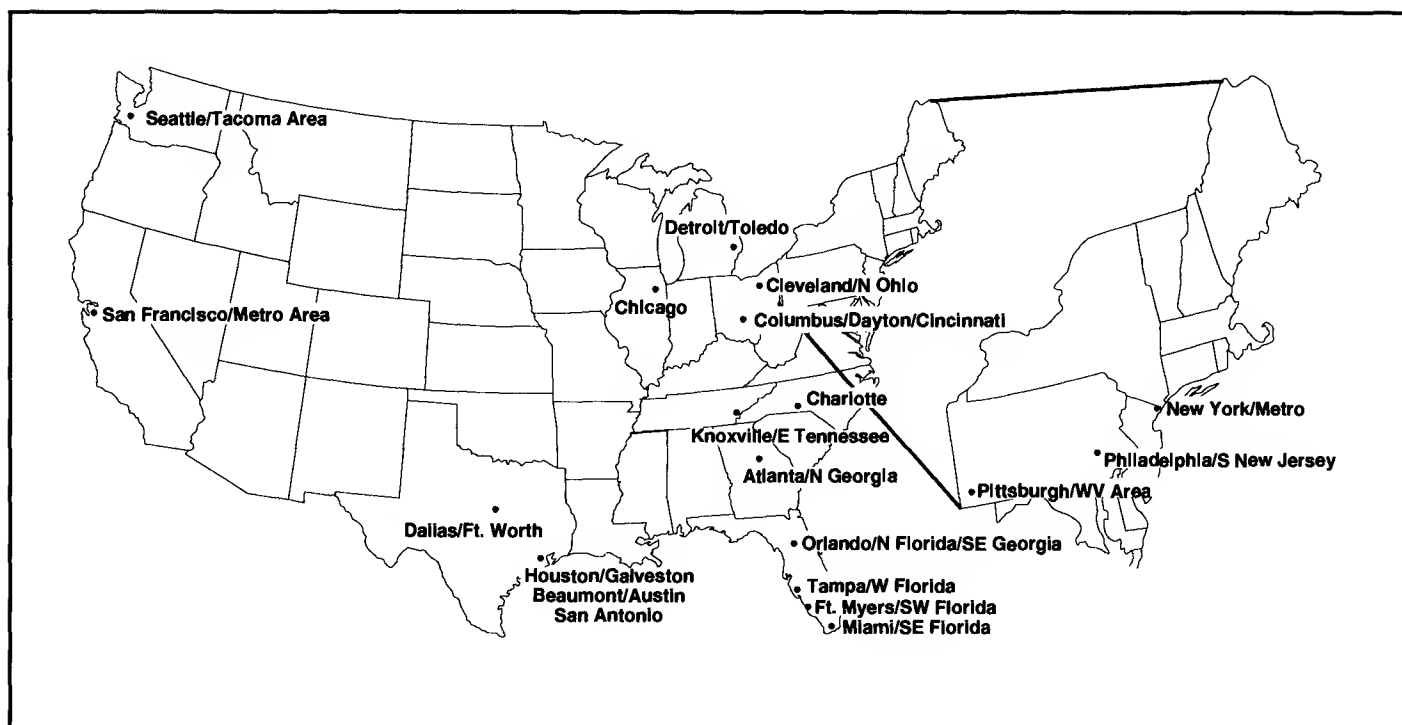

**NOTE:** If you reside in one of our Philips Factory Service Branch areas (see directory on back), you can contact the nearest Service Branch to obtain efficient and expedient repair for your product. If your product is In-Warranty, you should have proof-of-purchase to ensure No Charge Service. For Out-of-Warranty service, call the location nearest you.

**NOTA:** Si vous résidez dans une des régions desservies par une succursale de service après vente du fabricant Philips (voir liste ci-dessous), vous pourrez contacter la branche de service après vente la plus près de chez vous pour obtenir un service après vente rapide et efficace. Si le produit est sous garantie, il suffira de présenter une preuve d'achat pour bénéficier d'un service sans frais. Pour les produits non couverts par la garantie, contactez le centre le plus près de chez vous.

**NOTA:** Si Ud. reside en una de nuestras zonas para sucursales Philips de servicio al de fábrica (ver directorio más abajo), Ud. puede comunicarse con la sucursal de servicio más cercana para obtener una reparación oportuna y eficaz de su producto. Si su producto está todavía bajo garantía, Ud. debe presentar comprobante de compra para no ocasionar ningunos cargos por servicio. Para servicio después del vencimiento de la garantía, llame al lugar más cercano de los abajo indicados.

### In Canada

How you can obtain efficient and expedient carry-in, mail-in, or in-home service for your product

Please contact Philips at

1-800-661-6162 (French speaking)

1-800-363-7278 (English speaking)

### Au Canada

Comment obtenir le service après-vente pour les produits apportés ou envoyés par la poste à notre centre de service ou le service à domicile

Veuillez contacter philips à:

1-800-661-6162 (Francophone)

1-800-363-7278

### En el Canadá

Cómo recibir servicio eficiente para su producto, en persona, por correo o a domicilio

Favor de comunicarse con Philips al:

1-800-661-6162 (francófono)

1-800-363-7278 (anglófono)

**QUALITY SERVICE IS AS CLOSE AS YOUR TELEPHONE! SIMPLY LOOK OVER THE LIST BELOW FOR THE NUMBER OF A FACTORY SERVICE CENTER NEAR YOU. YOUR PRODUCT WILL RECEIVE EFFICIENT AND EXPEDIENT CARRY-IN, MAIL-IN, OR IN-HOME SERVICE, AND YOU WILL RECEIVE PEACE OF MIND, KNOWING YOUR PRODUCT IS BEING GIVEN THE EXPERT ATTENTION OF PHILIPS' FACTORY SERVICE. AND, IF THE PHONE NUMBER LISTED FOR YOUR AREA IS LONG DISTANCE, CALL 1-800-242-9225 FOR FACTORY SERVICE.**

COMMENT OBTENIR NOTRE SERVICE APRÈS VENTE RAPIDE ET EFFICACE SDIT PAR COURRIER, À DOMICILE, OU EN SE PRÉSENTANT À UN CENTRE DE SERVICE PHILIPS. PLUS DE 600 CENTRES DE RÉCEPTION DE PRODUITS À RÉPARER À TRAVERS LE PAYS: CONTACTER LE CENTRE DE SERVICE AUX CONSOMMATEURS LE PLUS PROCHE POUR SAVOIR L'EMPLACEMENT DE CES DÉPÔTS DANS UN RAYON DE 50 À 75 MILES (80 KM À 120 KM) DU CENTRE DE SERVICE LOCAL.

CÓMO OBTENER UN SERVICIO DEPORTUND Y EFICIENTE POR CORREO, EN CASA O EN PERSONA PARA SU PRODUCTO A TRAVÉS DE UN CENTRO PHILIPS DE SERVICIO. MAS DE 600 SITIOS POR TODO EL PAIS PARA LA RECEPCION DE PRODUCTOS NECESITADOS DE REPARACIONES: COMUNICARSE CON EL CENTRO DE SERVICIO DE FABRICA MAS CERCANO PARA ESTOS LUGARES DENTRO DE UN RADIO DE 80 A 120 KM (50 A 75 MILLAS) DEL CENTRO DE SERVICIO LOCAL.

**Atlanta—Athens—Macon—Chattanooga,  
TN—North Georgia Area**

200 North Cobb Parkway  
Building 100, Suite 120  
Marietta, GA 30062  
(770) 795-0085

**Charlotte—Winston Salem—  
Greensboro**

520-G Clanton Road  
Charlotte, NC 28217  
(704) 529-6330

**Chicago—Gary Area**

1360 W. Hamilton Parkway  
Itasca, IL 60143  
(630) 775-0990

**Cleveland—Akron—Youngstown Area**

24090 Detroit Road  
Westlake, OH 44145  
(216) 899-2040

**Columbus—Dayton—Cincinnati Area**

6333 Busch Blvd.  
Columbus, Ohio 43229  
(614) 781-2605

**Dallas—Ft. Worth Area**

13375 Stemmons Freeway,  
Suite 200  
Dallas, Texas 75234  
(214) 243-4775

**Detroit/Toledo Area**

25173 Dequindre  
Madison Heights, MI 48071  
(810) 544-2110

**Knoxville—Greeneville—  
Tri Cities—East Tennessee Area**

6700 D. Papermill Road  
Papermill Plaza  
Knoxville, TN 37919  
(423) 584-6614

**Ft. Myers—Naples—  
Southwest Florida Area**

11601 Cleveland Ave., Suite 15  
Ft. Myers, FL 33907  
(941) 278-4242

**Houston—Galveston—Beaumont—Austin—  
San Antonio Area**

1110 North Post Oak Road  
Suite 100  
Houston, TX 77055  
(713) 682-3990

**Miami—Southeast Florida Area**

2099 W. Atlantic Blvd.  
Pompano Beach, FL 33069  
(954) 978-0467

**New York Metro Area**

116 Charlotte Avenue  
Hicksville, NY 11801  
(516) 933-1780 Nassau County

**Orlando—Jacksonville—North  
Florida—Southeast Georgia Area**

2452 Sand Lake Road  
Orlando, FL 32809  
(407) 857-8998

**Philadelphia/S. New Jersey Area**

352 Dunks Ferry Road  
Bensalem, PA 19020  
(215) 638-7500

**Pittsburgh, PA—Steubenville, OH—  
Wheeling/Morgantown, WV Area**

2891 Banksville Road  
Pittsburgh, PA 15216  
(412) 563-8020

**San Francisco—Oakland—San Jose Area**

3370 Montgomery Drive  
Santa Clara, CA 95054  
(408) 492-9013

**Seattle—Tacoma/Olympia Area**

1055 Andover Park East  
Tukwila, WA 98188  
(206) 575-6288

**Tampa—St. Petersburg—Sarasota Area**

Center Point Business Park, Building B-1,  
Suite 100  
1911 U.S. Hwy. 301 North  
Tampa, FL 33619  
(813) 621-8181

# LIMITED WARRANTY

## COLOR TELEVISION

90 Days Free Labor

One Year Free Replacement of Parts (Two Years Free Replacement on Color Picture Tube)

This product can be repaired in-home.

### WHO IS COVERED?

You must have proof of purchase to receive warranty service. A sales receipt or other document showing that you purchased the product is considered proof of purchase.

### WHAT IS COVERED?

Warranty coverage begins the day you buy your product. For 90 days thereafter, all parts will be repaired or replaced free, and labor is free. From 90 days to one year from the day of purchase, all parts will be repaired or replaced free, but you pay for all labor charges. From one to two years from the day of purchase, you pay for the replacement or repair of all parts except the picture tube, and for all labor charges. After two years from the day of purchase, you pay for the replacement or repair of all parts, and for all labor charges.

All parts, including repaired and replaced parts, are covered only for the original warranty period. When the warranty on the product expires, the warranty on all replaced and repaired parts also expires.

### WHAT IS EXCLUDED?

Your warranty does not cover:

- labor charges for installation or setup of the product, adjustment of customer controls on the product, and installation or repair of antenna systems outside of the product.
- product repair and/or part replacement because of misuse, accident, unauthorized repair or other cause not within the control of Philips Consumer Electronics Company.
- reception problems caused by signal conditions or cable or antenna systems outside the unit.
- a product that requires modification or adaptation to enable it to operate in any country other than the country for which it was designed, manufactured, approved and/or authorized, or repair of products damaged by these modifications.
- incidental or consequential damages resulting from the product. (Some states do not allow the exclusion of incidental or consequential damages, so the above exclusion may not apply to you. This includes, but is not limited to, prerecorded material, whether copyrighted or not copyrighted.)
- a product used for commercial or institutional purposes.

### WHERE IS SERVICE AVAILABLE?

Warranty service is available in all countries where the product is officially distributed by Philips Consumer Electronics Company. In countries where Philips Consumer Electronics Company does not distribute the product, the local Philips service organization will attempt to provide service (although there may be a delay if the appropriate spare parts and technical manual(s) are not readily available).

### MAKE SURE YOU KEEP...

Please keep your sales receipt or other document showing proof of purchase. Attach it to this owner's manual and keep both nearby. Also keep the original box and packing material in case you need to return your product.

### BEFORE REQUESTING SERVICE...

Please check your owner's manual before requesting service. Adjustments of the controls discussed there may save you a service call.

### TO GET WARRANTY SERVICE IN U.S.A., PUERTO RICO OR U.S. VIRGIN ISLANDS...

Contact a Philips factory service center (see enclosed list) or authorized service center to arrange repair.

(In U.S.A., Puerto Rico and U.S. Virgin Islands, all implied warranties, including implied warranties of merchantability and fitness for a particular purpose, are limited in duration to the duration of this express warranty. But, because some states do not allow limitations on how long an implied warranty may last, this limitation may not apply to you.)

### TO GET WARRANTY SERVICE IN CANADA...

Please contact Philips at:

1-800-661-6162 (French Speaking)

1-800-363-7278 (English Speaking)

(In Canada, this warranty is given in lieu of all other warranties. No other warranties are expressed or implied, including any implied warranties of merchantability or fitness for a particular purpose. Philips is not liable under any circumstances for any direct, indirect, special, incidental or consequential damages, howsoever incurred, even if notified of the possibility of such damages.)

### REMEMBER...

Please record the model and serial numbers found on the product below. Also, please fill out and mail your warranty registration card promptly. It will be easier for us to notify you if necessary.

MODEL # \_\_\_\_\_

SERIAL # \_\_\_\_\_

*This warranty gives you specific legal rights. You may have other rights which vary from state/province to state/province.*

**Philips Service Company, P.O. Box 555, Jefferson City, Tennessee 37760, (423) 475-8869**